


# pandigital **novel**

► User Guide  
v3.4

# Register your pandigital novel

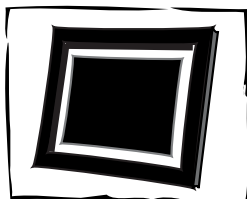

Qualify to win a FREE  
digital photo frame!\*

*(valid in USA only)*



Register your FREE  
1-year warranty!\*\*

**Register now at [www.pandigital.net](http://www.pandigital.net)**

\*For details, go to our website: [www.pandigital.net](http://www.pandigital.net)

\*\*The online signup is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

**NOTE:** If you must mail your 1-year registration, please send your name, address, phone number, model, serial number, and when and where purchased to: **Pandigital, P.O. Box 2969, Dublin, CA 94568-2969 USA**

**Note:** Your device style and features may differ from those documented in this User Guide.

UG-E\_PRD07T20WBL1\_v3.4\_09-10

---

## Table of Contents

|   |           |
|---|-----------|
| <b>Package Contents .....</b>                                     | <b>9</b>  |
| <b>Covers for your pandigital novel .....</b>                     | <b>9</b>  |
| <b>Device Overview .....</b>                                      | <b>10</b> |
| <b>Power Button Usage .....</b>                                   | <b>10</b> |
| <b>Touch-Screen Navigation .....</b>                              | <b>11</b> |
| Using the Stylus .....  | 11        |
| <b>Wi-Fi &amp; Low Power Button.....</b>                          | <b>11</b> |
| <b>Reset Device .....</b>   | <b>11</b> |
| <b>Getting Started .....</b>                                      | <b>12</b> |
| <b>Home Screen .....</b>  | <b>14</b> |
| <b>Application Quick Launch Bar .....</b>                         | <b>15</b> |
| <b>Overview of Buying &amp; Downloading Books to Device .....</b> | <b>16</b> |
| <b>Barnes &amp; Noble BOOKSTORE.....</b>                          | <b>17</b> |
| Purchase a Book .....   | 18        |
| Purchase eMagazines or eNewspapers.....                           | 18        |
| Get Free Sample .....   | 19        |
| Buy Sample Books .....  | 19        |
| My Library Row 2 .....  | 20        |
| <b>SHOP B&amp;N .....</b>   | <b>20</b> |
| Download Purchased Media .....                                    | 20        |
| <b>MY LIBRARY .....</b>   | <b>21</b> |
| Media Status Labels .....   | 22        |
| Get Books .....   | 22        |
| Manage Books .....  | 23        |
| Lend/Return Books.....  | 24        |
| Loan a Book .....   | 24        |
| Check for Offers .....  | 25        |
| Opening Borrowed Books.....                                       | 25        |
| Return a Borrowed Book .....                                      | 25        |
| Buy Returned Books.....   | 25        |
| Bookshelves.....  | 26        |
| Add New Bookshelf .....   | 26        |
| Manage Bookshelf.....   | 26        |
| Display Shelf .....   | 26        |
| Quick Open another Bookshelf .....                                | 27        |
| Delete Shelf.....   | 27        |
| Update .....  | 27        |

|  |           |
|--|-----------|
| <b>READER .....</b>                          | <b>28</b> |
| Reader Function Menu .....                   | 29        |
| Library .....                                | 29        |
| Table of Contents .....                      | 29        |
| Bookmarks .....                              | 29        |
| Bookmarks .....                              | 29        |
| Notes.....                                   | 30        |
| Add Note .....                               | 30        |
| View Notes .....                             | 30        |
| Delete Notes.....                            | 30        |
| Highlights .....                             | 30        |
| Add Highlights .....                         | 30        |
| View Highlights.....                         | 30        |
| Hide all Highlights.....                     | 31        |
| Delete Highlights .....                      | 31        |
| Go To .....                                  | 31        |
| Display Table of Contents.....               | 31        |
| Jump to Page .....                           | 31        |
| Search for Specific Text.....                | 31        |
| Last Read.....                               | 32        |
| Font Size .....                              | 32        |
| Night Read .....                             | 32        |
| Screen Orientation - Lock.....               | 33        |
| Play Music in Background while Reading ..... | 33        |
| <b>WEB.....</b>                              | <b>33</b> |
| Go to a Website.....                         | 34        |
| Browser Function Menus .....                 | 34        |
| Go To Website .....                          | 36        |
| Browser Bookmarks .....                      | 36        |
| Bookmark a Web Page.....                     | 36        |
| Go to Bookmarked Web Page .....              | 36        |
| Delete Bookmarks .....                       | 36        |
| New Window .....                             | 36        |
| Open New Window.....                         | 37        |
| Switch Windows .....                         | 37        |
| Close Windows.....                           | 37        |
| Browser Settings .....                       | 37        |
| Page Content .....                           | 37        |
| Privacy .....                                | 38        |
| Security .....                               | 38        |
| Advanced Settings.....                       | 38        |
| Find on Page.....                            | 38        |

|  |           |
|--|-----------|
| Select Text .....                          | 39        |
| Share .....                                | 39        |
| Downloads .....                            | 39        |
| <b>SETTINGS .....</b>                      | <b>40</b> |
| Settings>General.....                      | 40        |
| Settings>Photos .....                      | 40        |
| Settings>Network .....                     | 41        |
| Turn Wi-Fi Off.....                        | 41        |
| Delete 'Remembered' Wi-Fi Network.....     | 41        |
| Settings>Alarm.....                        | 42        |
| Add Alarm .....                            | 42        |
| Set Alarm Volume.....                      | 42        |
| Shut Off Alarm Alert.....                  | 42        |
| De-Activate Alarms.....                    | 42        |
| Edit Alarm.....                            | 43        |
| Delete Alarm.....                          | 43        |
| Settings>Factory Reset .....               | 43        |
| Settings>Support.....                      | 45        |
| <b>MUSIC.....</b>                          | <b>45</b> |
| Play Music.....                            | 45        |
| Delete Audio Files .....                   | 46        |
| Playlist.....                              | 46        |
| Add songs to Playlist .....                | 46        |
| Play songs in Playlist.....                | 46        |
| Delete songs from Playlist .....           | 47        |
| Return to Music List.....                  | 47        |
| <b>VIDEOS.....</b>                         | <b>47</b> |
| Play Video .....                           | 47        |
| Video Navigation Bar.....                  | 48        |
| Delete from Video Library.....             | 48        |
| <b>PHOTOS .....</b>                        | <b>48</b> |
| Photo Gallery.....                         | 48        |
| Photo Function Menu Options .....          | 49        |
| Play Slideshow.....                        | 50        |
| Play Music in Background .....             | 50        |
| Wallpaper.....                             | 50        |
| Import Photos .....                        | 50        |
| Delete Photos.....                         | 51        |
| <b>EMAIL .....</b>                         | <b>51</b> |
| Add Email Accounts .....                   | 51        |
| Set up Yahoo! Plus Account .....           | 52        |
| Set up Juno Platinum or Turbo Account..... | 52        |

|  |           |
|--|-----------|
| Edit Email Information .....             | 52        |
| Email Inbox .....                        | 52        |
| Open Email Message .....                 | 53        |
| Compose New Email Message .....          | 53        |
| Delete Email Accounts .....              | 53        |
| Set Default Email Account .....          | 54        |
| <b>ALARM .....</b>                       | <b>54</b> |
| <b>CALENDAR .....</b>                    | <b>54</b> |
| Add Event.....                           | 55        |
| Edit Event.....                          | 55        |
| Event Reminder Alerts.....               | 55        |
| Delete Events .....                      | 55        |
| <b>CONTACTS .....</b>                    | <b>56</b> |
| Add New Contacts.....                    | 56        |
| Edit Contacts.....                       | 56        |
| Email Contacts .....                     | 56        |
| Delete Contacts .....                    | 56        |
| <b>STOCKS .....</b>                      | <b>56</b> |
| <b>FACEBOOK.....</b>                     | <b>57</b> |
| <b>WEATHER .....</b>                     | <b>57</b> |
| <b>SEARCH .....</b>                      | <b>57</b> |
| <b>IMPORT SD CARD .....</b>              | <b>57</b> |
| Read Imported eBooks .....               | 58        |
| Delete Local eBooks.....                 | 58        |
| <b>Connect to Computer.....</b>          | <b>58</b> |
| PC System Requirements .....             | 59        |
| Connect to Windows PC.....               | 59        |
| Connect to Macintosh Computer .....      | 60        |
| Read Copied eBooks.....                  | 61        |
| <b>Adobe® eBooks.....</b>                | <b>61</b> |
| <b>USER GUIDE .....</b>                  | <b>63</b> |
| <b>UPDATE FIRMWARE .....</b>             | <b>63</b> |
| <b>Frequently Asked Questions.....</b>   | <b>64</b> |
| <b>Battery Management .....</b>          | <b>69</b> |
| <b>Important Safety Precautions.....</b> | <b>69</b> |
| Cleaning the device .....                | 69        |
| <b>Technical Specifications.....</b>     | <b>70</b> |
| <b>Limited Warranty .....</b>            | <b>71</b> |
| FCC Notices .....                        | 72        |
| FCC Radiation Exposure Statement: .....  | 72        |

|   |           |
|---|-----------|
| <b>Disclaimers .....</b>                        | <b>73</b> |
| <b>License Agreement and Terms of Use .....</b> | <b>73</b> |
| CE Notice .....                                 | 76        |
| Battery Statement.....                          | 76        |
| Radiation Exposure Statement .....              | 76        |
| IC Notice .....                                 | 76        |



## pandigital **novel**

A contemporary multimedia device designed for straightforward functionality, featuring a full color TFT LCD display and convenient touch-screen navigation.

Your pandigital **novel** is a light and stylish electronic multimedia eReader which allows you to quickly and easily download and read digital printed material (*eBooks, eMagazines, and eNewspapers*) anytime and anywhere.

Connect to a Wi-Fi network to shop, purchase and download media from Barnes & Noble, browse the web, send/receive email, and much more!

Also, you can view photo slideshows, watch videos, and listen to music through the built-in speakers or with headphones (*not included*).

### **READ. SURF. PLAY.**

Your pandigital **novel** is a step up in multimedia devices. Congratulations on your choice!



---

## Package Contents

- pandigital **novel**
  - Power Adapter
  - Tabletop Stand
  - USB Cable
  - Stylus
  - Quick Start Guide
  - User Guide (*loaded in device*)
- 

## Covers for your pandigital **novel**

Dress up your pandigital **novel** and keep it safe at the same time.

Designed for protection, these stylish covers safeguard your eReader while still letting you read, surf and play.

Available in multiple colors. Sold separately wherever pandigital **novels** are sold, or on our website: [www.pandigital.net](http://www.pandigital.net).

### Portfolio Case



*with  
magnetic  
closure*

### Gel Cover



**Read a good book,  
and look good doing it.**

---

## Device Overview



---

## Power Button Usage

**Turn On:** Press and hold the power button at least 3 seconds or until the boot up message appears.

**Turn Off:** Press and hold the power button for 3 seconds, and then tap **Power off**, and tap **OK** confirm the power off or **Cancel** to leave the device on.

**Sleep Mode On/Off (energy saver):** While unit is on, press & release the power button quickly.

---

## Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

Throughout the User Guide, you are instructed to use the following touch navigation methods:

**Tap** = quick touch and release your finger on an item on the screen  
(i.e., *selecting items*)

**Touch & hold** = touch your finger and hold in place until a response by application. (i.e., *display dictionary, add note to book page*)

**Finger slide** = quick light touch & slide your finger across the screen, and then release (i.e., *turning pages of your book*)

**Touch, hold & slide** = touch your finger, hold & slide your finger across the screen, and then release (i.e., *highlighting text, selecting text to paste*)

## Using the Stylus


A stylus is conveniently stored in the bottom right end of the device. When desired, you can use it instead of your finger for easier and sometimes more accurate screen navigation when tapping small options.

---

## Wi-Fi & Low Power Button

If you don't need a Wi-Fi connection for a while (i.e., *while reading books*), we recommend that you turn the Wi-Fi & Low Power button on the top of the device **OFF** to save battery power. Turn the button back on when you want Wi-Fi connection again.



❖ The  on the top of screens indicates the Wi-Fi is connected, otherwise no icon is displayed.

---

## Reset Device

In the event that the device does not respond to your touch, you can reboot/restart it by pressing and holding the power button for 10 seconds.

# Getting Started

## 1 Charge your Device

Plug the power adapter into an electrical wall outlet, and then connect to your device to fully charge the battery before use (approx. 4 hours).

❖ *The battery does not charge via the USB cable.*

While charging, the battery icon displays as: .


When fully charged, the battery icon displays as: .

❖ *You can use the device while the battery is charging.*

## 2 Turn Device On


Press the power button approximately 3 seconds until you see the boot up message.

## 3 Select Language

❶ Tap  next to the desired language. (*English only available; more languages will be available in future firmware updates.*)


❷ Tap **Save**.

## 4 Wi-Fi Network Setup

The pandigital **novel** automatically scans and lists local Wi-Fi Networks found. A  indicates secure networks that require login name/password to connect.

❶ Tap the desired network to which you want to connect.

❷ If secure network, enter the network **Password**, and then tap **Connect**.

❸ When connected, tap  to continue.

❖ *If your Wi-Fi network broadcast is set as hidden, tap **Add Network** to enter the network name and password, and then tap **Connect**.*



## Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

- 1 Follow steps 1-3 above to select the hotspot Wi-Fi network.
- 2 Select **Web** from the Application Quick Launch Bar.
- 3 Enter the login information as required by the hotspot.


## 5 Email Setup

❖ *POP3, SMTP and IMAP accounts are supported.*

- 1 Enter your **Name**, **Email Address** and **Password**, and then tap **Next**.
- 2 You can give this account a name if desired, and then tap **Next**.



## 6 Populate BOOKSTORE row and MY LIBRARY Row 2

- 1 Select **Settings** from the Application Quick Launch Bar.
- 2 Enter your Barnes & Noble **User Name** and **Password**, and then tap **Login**.
- 3 Tap in the **Time Zone** field to select the time zone for your location, and then tap **Set Date/Time**. **Must be correct to connect with your Barnes & Noble account.**
- 4 An automatic update is performed to populate the Bookstore row with Barnes & Noble's latest books.
- 5 Tap  to close the Settings window.
- 6 Tap **Update Library** to populate My Library row 2 with the downloadable media within your Barnes & Noble online account.

❖ **Reset Device:** *In the event that your device does not respond to your touch, you can reboot/restart it by pressing and holding the power button for 10 seconds.*



## Home Screen

- ❶ Wi-Fi connection status  
Battery charge level status  
Alarm(s) are activated  
Current Time

- ❷ **Bookstore** row shows latest books from Barnes & Noble (*scrollable*). Tap on media cover to display description, synopsis and **Buy** options.

- ❸ Tap **Update** to sync with Barnes & Noble's website and populate the Bookstore row.

- ❹ Tap **Bookstore** to launch web browser and go to Barnes & Noble's website.

- ❺ Tap **Update Library** to sync with your Barnes & Noble account to display the covers of downloadable media in My Library row 2.

- ❻ **My Library:**

**Row 1** displays your recently viewed media (*non-scrollable*).

**Row 2** displays media currently in your Barnes & Noble account (*scrollable*).

Tap **My Library** for quick access to My Library screen.

- ❼ Tap on any media icon in the My Library rows to open and display the media in the Reader.

- ❽ **Application Quick Launch Bar** (*scrollable*). Tap icons to launch applications.

- ❾ Tap to hide and open the Application Quick Launch Bar.



---

## Application Quick Launch Bar



**Home**

Displays the Home screen



**Reader**

Display your digital media for reading (*EPUB, PDF*)



**My Library**

Stores your digital media (*eBooks, eMagazines and eNewspapers*).



**Web**

Access the Internet and 'surf the web' whenever desired.



**Music**

Play and manage audio files (*MP3, WAV, AAC*)



**Videos**

Play and manage video files (*MPEG4*)



**Photos**

View and manage photo files (*JPG, JPEG, BMP, PNG, non-animated GIF*)



**Email**

Send/Receive email using your existing email addresses.



**Shop B&N**

Shop the Barnes & Noble website.



**Alarm**

Use as alarm clock with scheduled alarms.



**Calendar**

Display monthly calendar and schedule events.



**Search**

Search for specific strings of text in media file names.



**Import SD**

Import media files into the internal memory.



**Settings**

Multiple settings for personalizing and enhancing the device.



**Weather**

Check the weather forecasts of locations of your choice.



**Stocks**

Check the status of specific company's stock offerings.



**Facebook**

Quick access to the Facebook website.



**Contacts**

 
Create a list of personal contacts.



**User Guide**

View full pandigital **novel** User Guide.

## Overview of Buying & Downloading Books to Device

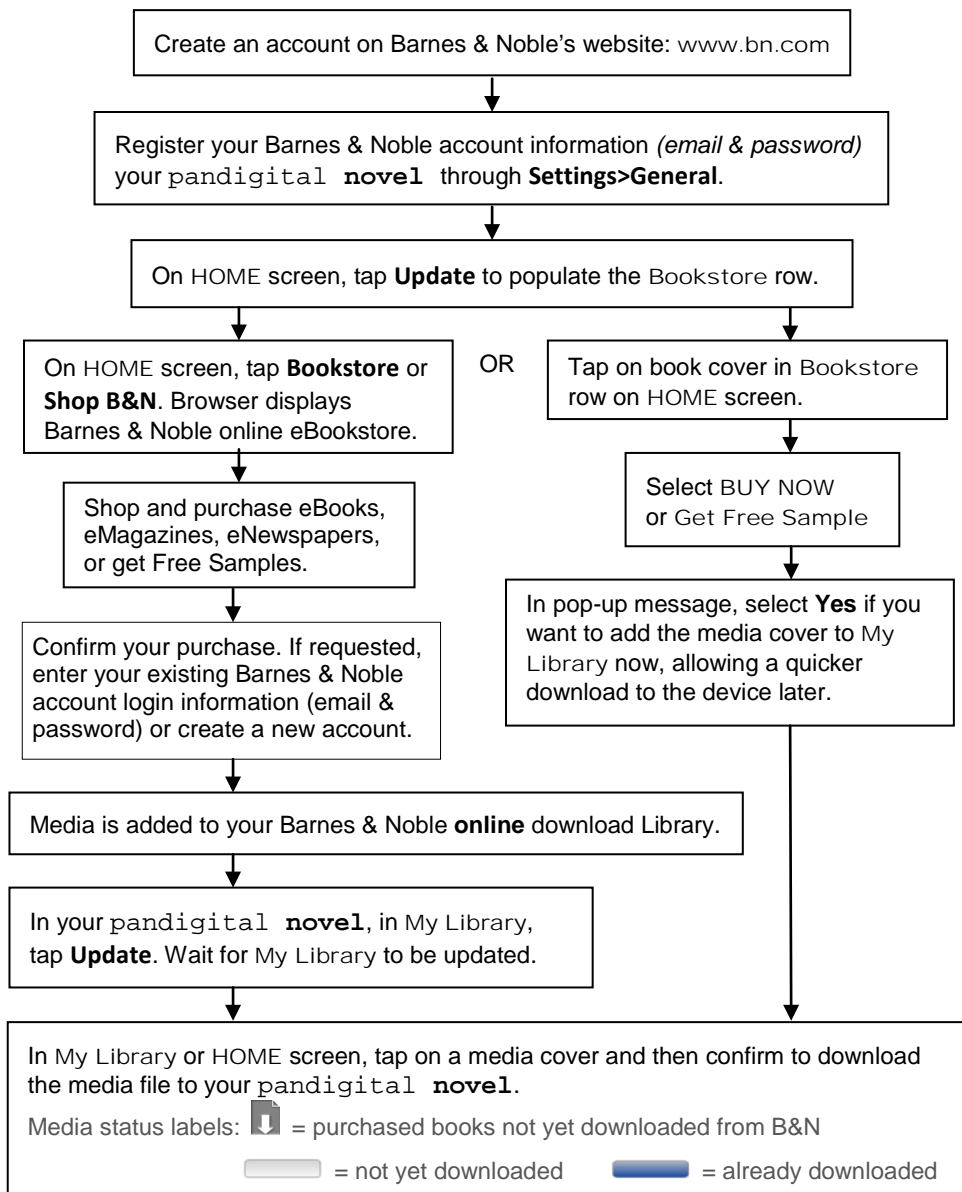




## Barnes & Noble BOOKSTORE

The top row of the Home screen displays the latest Barnes & Noble books available for purchase directly from the Barnes & Noble online bookstore.

❖ *The first time you turn your pandigital **novel** on, the Bookstore row is empty. Be sure you are connected with a Wi-Fi network, and then tap **Update** to sync with the Barnes & Noble website and populate the Bookstore row.*



 
Tap on any book cover in the Bookstore row to display that book's descriptive information and synopsis (*example below*).

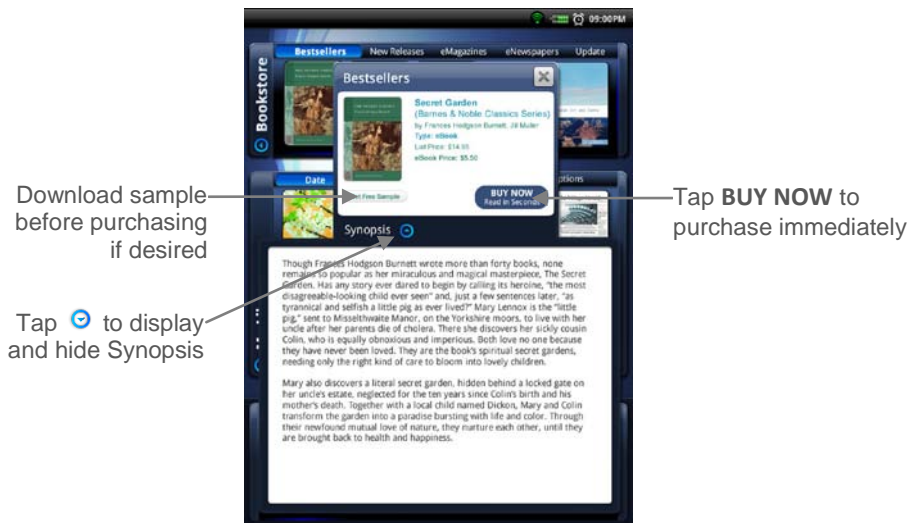

If you want full details about a book, including Editorial and Customer Reviews, use the **Shop B&N** feature to shop on the Barnes & Noble website (pg. 20). After purchasing, use the **Get Books** feature to download them from your Barnes & Noble online account into your **pandigital novel** (pg. 22).

## Purchase a Book

1. To be sure you are viewing the most current media on the Barnes & Noble website, in the Home screen tap **Update** above the Bookstore row.
2. Tap on any book in the Bookstore row in the Home screen to display the book details, including pricing, sample availability, and a synopsis.
3. In the book's descriptive window, tap **BUY NOW**.
4. Tap **OK** in the confirmation screen. The book is added to your Barnes & Noble online account download library.
5. After the book is added, a pop-up message appears. Tap **Yes** to add the book cover to My Library now, allowing a quicker download to the device later. Tap **Skip** if you want to continue shopping. After you have purchased all desired books, tap **Update Library** in My Library to update with new book covers.
6. Tap on covers with a download icon  to download the books.
7. After downloading, tap on a cover to open the book in the Reader.

## Purchase eMagazines or eNewspapers

1. To be sure you are viewing the most current media on the Barnes & Noble website, in the Home screen tap **Update** above the Bookstore row.
2. Tap **eMagazines** or **eNewspapers** to display only that media.
3. Tap on any publication cover to display the publication price and purchase buttons.
4. **To purchase a single issue only (when offered):** Tap on the publication cover; the browser opens to the Barnes & Noble product page with publication's full details. Tap **Buy Current Issue**, → tap **Confirm** in the confirmation screen.
5. **To purchase a monthly subscription:** Tap **Subscribe Now**, → tap **OK** in the confirmation screen. The publication is added to your Barnes & Noble online account download library.
6. After the publication is added, a pop-up message appears. Tap **Yes** to add the publication cover to My Library now, allowing a quicker download to the device later.

Tap **Skip** if you want to continue shopping. After you have purchased all desired publications, tap **Update Library** in My Library to update with new publication covers.

7. Tap on a cover with white **Date** to download the issue.
8. After downloading, tap on the cover to open it in the Reader.

## Get Free Sample

Some, but not all, books offer a free sample that you can download and read before purchasing the book.

1. To be sure you are viewing the most current media on the Barnes & Noble website, in the Home screen tap **Update** above the Bookstore row.
2. Tap on any book in the Bookstore row in the Home screen to display the book details, including pricing, sample availability, and a synopsis.
3. If available, tap the **Get Free Sample** button to add the sample to your Barnes & Noble online account.
4. After the book is added, a pop-up message appears. Tap **Yes** to add the sample book cover to My Library now, allowing a quicker download to the device later.

Tap **Skip** if you want to get more samples now. After you have chosen all desired free samples, tap **Update Library** in My Library to update with new sample book covers.

5. Tap on covers with white label **Sample** to download the sample books.
6. After downloading, tap on a cover to open the sample book in the Reader.

## Buy Sample Books

You can quickly and easily buy the full version of a sample book that is listed in My Library.

1. In the My Library screen, touch and hold on the “Sample” book cover that you want to purchase.
2. In the pop-up window, tap **Purchase this ebook**, → tap **OK**.
3. Tap **OK** to confirm the purchase.
4. After the purchase is confirmed, the device automatically syncs with your Barnes & Noble online account to update My Library.

The sample book is changed from “Sample” to “purchased” status.


Tap on the book cover or use the **Get Books** feature to download your purchased book (pg. 22).

## My Library Row 2

**IMPORTANT:** In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

On the Home screen, the second row of My Library displays the covers of your downloaded or downloadable media in your Barnes & Noble online download library.

As you purchase media or add book samples to your online account, they are not reflected in your **p a n d i g i t a l n o v e l** until you perform an update.

1. Be sure you are connected to a Wi-Fi network.
2. In the Home screen, tap **Update Library** at the top of the My Library row.
3. The last update date is displayed, allowing you to determine whether you want to do another update now or not. Tap **OK** to do an update now (or tap  to close the window without doing an update).
4. Please wait while syncing with your Barnes & Noble account. This could take several minutes depending on how many downloadable items are in your download library.

❖ *To help speed up your future updates, after downloading your media you can log into your Barnes & Noble online account and move the already downloaded items into your Archive folder.*



---

## SHOP B&N

Select **Shop B&N** from the Application Quick Launch Bar to log onto the Barnes & Noble website.

Shopping directly on the Barnes & Noble website allows you to view full details about a book, including Editorial and Customer Reviews, along with the synopsis.

## Download Purchased Media

After purchasing books, use the **Get Books** feature to download them from your Barnes & Noble online account into your **p a n d i g i t a l n o v e l** (pg. 22).

 


## MY LIBRARY

Select **My Library** from the Application Quick Launch Bar.

❖ If you have not yet set up your Barnes & Noble account on the device, do so now through **Settings>General** (pg. 40).

- 1 Function Menu
- 2 Row 1: Quick launch area for your last read media (non scrollable).
- 3 Rows 2-4: Downloaded and downloadable media in your Barnes & Noble online account (scrollable).
- 4 Open & hide the **Application Quick Launch Bar**.
- 5 Tap on any media icon to open and display it in the Reader. Refer to page 22 for descriptions of labels on media covers.
- 6 Quick jump to other bookshelves. (Use **Bookshelves** function to create new bookshelves.)
- 7 To update rows 2-4, tap **Update** to sync with your Barnes & Noble account.

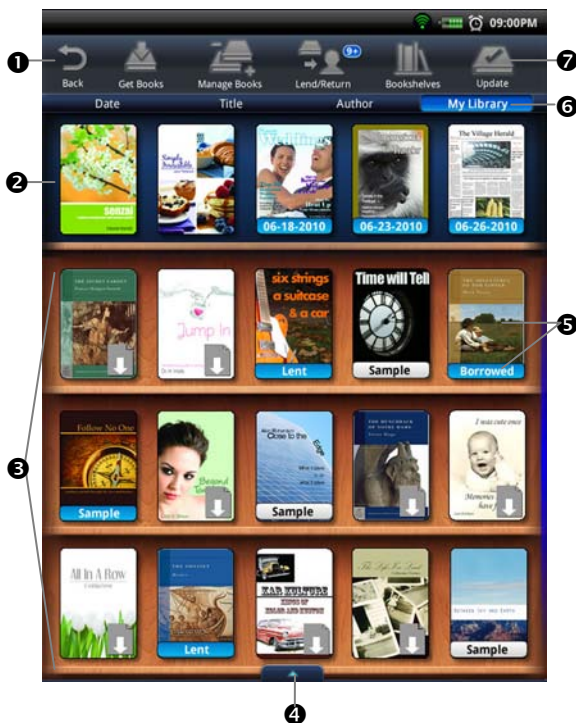








**IMPORTANT:** To access and open books imported from an **SD card** or **computer**, tap **Date**, **Title** or **Author**, and then tap **Local** from the drop-down list.

To access and open books imported from **Adobe Digital Editions**, tap **Date**, **Title** or **Author**, and then tap **Adobe Books** from the drop-down list.

❖ When you have multiple issues of the same eMagazine and/or eNewspaper, only the most recent issue appears in My Library. Tap on the shown issue to display a list of all available issues, and then select the issue you want to open.

## Media Status Labels

The media shown in My Library has status labels as follows:

-  = Purchased books not yet downloaded into your **pandigital novel**. After download, the book has no label.
-  **White Date** = eMagazines or eNewsletters **not yet downloaded** into your **pandigital novel**.  
**After downloading**, the label changes to .  
❖ *The date indicates the publication's issue date.*
-  **White Sample** = sample books **not yet downloaded** from your Barnes & Noble online account.  
**After downloading**, the label changes to .
-   **Borrowed** or **Lent** = books you have borrowed from or lent to others.  
❖ *Lent books are not available to read until they are returned from recipient.*



## Get Books

**IMPORTANT:** In order to connect with your Barnes & Noble online account, the **Date and Time must be set correctly according to your location.**

- ❖ To use the **Get Books** feature, you must have an account with Barnes & Noble. If you have not yet registered an account, select **Shop B&N** from the Application Quick Launch Bar, or tap **Bookstore** on the Home screen, to go to the Barnes & Noble website: [www.bn.com](http://www.bn.com) to register now.
- ❖ You must have already set up your Barnes & Noble account in the device on **Settings>General** screen (pg. 17).
- ❖ If you have multiple Barnes & Noble accounts, the only media that will appear as downloadable is media associated with the account that you have registered in the device (under **Settings>General**).
- ❖ You must be connected to a Wi-Fi network in order to connect to and download media from the Barnes & Noble website.
- ❖ eBooks downloaded from Barnes & Noble to a Macintosh computer are saved in an unsupported .pdb format. If you copy the .pdb formatted eBooks into your **pandigital novel**, they will not be recognized. You should always use **Get Books** to download eBooks directly from your Barnes & Noble

download library into your *pandigital novel*. Music, Video and Photo files can be copied from a Macintosh computer into your *pandigital novel* as long as they are in a supported file format.

1. Tap **My Library**.
2. To be sure you are viewing the most current media in your Barnes & Noble account, tap **Update**.
3. After My Library has been updated, tap **Get Books**.
4. To download all media, tap **Download All**.  
To download selected media, tap ☐ next to the items you want to download, → tap **Download Selected**.
5. The media is downloaded and added to My Library.
6. When media is sorted by **Date**, it is displayed by the date it was added to your Barnes & Noble online account, not the date you downloaded it to the device. To find your newly downloaded media quicker, sorting by **Title** or **Author** may help.
7. Tap on a media cover to open it in the Reader.
  - ❖ *When you tap on a downloaded book, you may be presented with an 'unlock' message requesting your credit card information to unlock the media file. Tap into the entry fields to enter your credit card information, → tap **OK**. Upon completion, the book is unlocked and automatically open in the Reader.*
  - ❖ *When you have multiple issues of the same eMagazine and/or eNewspaper, only the most recent issue appears in My Library. Tap on the shown issue to display a list of all available issues, and then select the issue you want to open.*



## Manage Books

Use this feature to delete media from My Library.

1. In the My Library screen, tap **Manage Books** to display a complete list of all media you have added to My Library.
2. Media is sorted by date; if desired, tap **Title** or **Author** (first name) to re-sort your media accordingly.
3. Tap ☐ next to the media you want to delete, → tap **Delete Selected**.




## Lend/Return Books

There are some books that Barnes & Noble classifies as “*lendable*”, which means that those books can be loaned to others who also have a Barnes & Noble account.

Please be aware of the following considerations before loaning or borrowing any books:

- In order to unlock and open a loaned book, the recipient must use their name and credit card number that is registered with their Barnes & Noble account.
- The book can only be loaned for 14 days.
- Only one copy of a book can be read at a time. Therefore, you won't have access to the book until after it has been returned from the recipient.
- ❖ *You must be connected to a Wi-Fi network before you can use the Lend/Return Books function.*
- ❖ *When present, the number that appears with the Lend/Return icon indicates new activity within this feature.*
- ❖ *After launching the Lend/Return feature, a window appears. The number behind **Return books** indicates the number of borrowed books to be returned. The number behind **Check for offers** indicates new offers pending.*

## Loan a Book

1. Tap **My Library**.
2. To be sure you are viewing the most current media in your Barnes & Noble account, tap **Update**.
3. After My Library has been updated, tap **Lend/Return**.
4. Tap **Lend books** in the pop-up window.
5. Tap  next to a book that you want to lend, → tap **Lend**.
6. Tap in the **email** address entry field to enter the email address that is registered with the recipient's Barnes & Noble account.
  - ❖ **CAUTION:** *Enter the email address carefully. If you enter an invalid email address, the book will be in a locked state until the offer expires in 7 days.*
7. Tap in the **message** window to enter a personal message to accompany the media.
  - ❖ *The personal message appears in an email that is sent to the recipient and in their Barnes & Noble account.*



## 8. Tap **Lend Book**.


The book's status changes to 'LENT' and remains in a locked state until it is returned to your account.

If the recipient **declines** the loan offer, the book will be available in My Library after you perform an **Update** to sync with your Barnes & Noble account again.

## Check for Offers

Use this function to check for book loan offers that you have not yet accepted or declined.

❖ *Offers expire after 7 days.*

1. In the My Library screen, tap **Update** to sync with your Barnes & Noble account.
2. After My Library has been updated, tap **Lend/Return**.
3. Tap **Check for offers** in the pop-up window.
4. Tap  next to an offer, tap → **Accept** or **Decline** as desired.

❖ *Use the **Get Books** feature to add the loaned book to My Library.*

❖ *Declined books are permanently removed from the Book Offers screen.*


## Opening Borrowed Books

After you accept and download a loaned book, it appears in My Library.

Tap on the book cover to open it in the Reader.

❖ *You may be required to unlock the book using the credit card name and number that is registered with your Barnes & Noble account.*

## Return a Borrowed Book

1. In the My Library screen, tap **Lend/Return**.
2. Tap **Return books** in the pop-up window.
3. Tap  next to the borrowed book that you want to return, → tap **Return**.
4. The book is labeled "Returned" in My Library.

## Buy Returned Books

You can quickly and easily buy a copy of a returned book.

1. In the My Library screen, touch and hold on the "Returned" book cover that you want to purchase.
2. In the pop-up window, tap **Purchase this ebook**, → tap **OK**.

3. Tap **OK** to confirm the purchase.
5. After the purchase is confirmed, the device automatically syncs with your Barnes & Noble online account to update My Library.
6. The book is changed from “Returned” to “purchased” status. Tap on the book cover or use the **Get Books** feature to download your purchased book (pg. 22).




## Bookshelves

Use **Bookshelves** to create and manage personalized bookshelves into which you want to save your downloaded media (*i.e.*, *Short Stories*, *Drama*, *etc.*).




❖ *The number of books within a bookshelf is displayed in the right column.*

### Add New Bookshelf


1. In the My Library screen, tap **Bookshelves**.
2. Tap **Add Shelf**.
3. Enter the desired bookshelf name (*i.e.*, *Short Stories*, *Drama*, *etc.*).
4. Tap  to create the new bookshelf. (Use Manage Bookshelf to add media to the new bookshelf.)

### Manage Bookshelf

Use **Manage Bookshelf** to add to and remove media from bookshelves.

1. In the My Library screen, tap **Bookshelves**.
2. Tap  next to the bookshelf you want to add or remove media, → tap **Manage Bookshelf**.
3. Media is sorted by date; if desired, tap **Title** or **Author** to re-sort your media accordingly.
4. Tap  next to the media you want to add to the bookshelf, or tap  to delete from the bookshelf.
5. Tap **Save** to update your bookshelf.

### Display Shelf


1. In the My Library screen, tap **Bookshelves**.
2. Tap  next to the bookshelf you want to display, → tap **Display Shelf**.
3. The screen's layout resembles the My Library screen, with your last read media in the top row and the media you added in rows 2-4.

4. Media is sorted by date; if desired, tap **Title** or **Author** to re-sort your media accordingly.

### Quick Open another Bookshelf

Tap the bookshelf name in the upper right of any bookshelf screen to display the list of all bookshelves, → tap the desired bookshelf to open.

### Delete Shelf

1. In the My Library screen, tap **Bookshelves**.
2. Tap  next to the bookshelf you want to delete.
3. Tap **Delete**.
4. Deleting a bookshelf does not delete the books from the device. They are still in My Library.



### Update

**IMPORTANT:** In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

❖ *You must be connected to a Wi-Fi network before you can perform the **Update** function.*

1. On the Home screen, tap **My Library**.
  2. To be sure you are viewing the most current media in your Barnes & Noble account, tap **Update**.
  3. Rows 2-4 are updated with all downloadable media in your Barnes & Noble online account.
  4. Please wait...this could take several minutes depending on how many items are in your online account.
- ❖ *To help speed up your future updates, after downloading your media you can log into your Barnes & Noble online account and move the downloaded items into your Archive folder.*
- ❖ *Refer to **Media Status Labels** for descriptions of media status labels (pg. 22)*



## READER

The **Reader** application is for displaying your digital media (*eBooks, eMagazines, and eNewspapers*).

❖ *eBook supported formats: EPUB, PDF*


Methods that can be used to launch the **Reader**:

- Tap on a media cover in the Home or any Bookshelf screen.
- Select **Reader** from the Application Quick Launch Bar; the last read media file opens. **Note:** *You must exit the Reader before shutting off the device in order for the last read page to be saved.*


Reader Function Menu

Tap on the  
**top of the screen**  
to display the menu



Tap  in upper right corner to bookmark a page (*when Reader Function Menu is not displayed*)

Finger slide right-to-left for next page.

 
Tap on the **top of the screen** and then tap  to display the **Application Quick Launch Bar**

- ❖ To **highlight** text, touch, hold & slide across the desired text, and then select **Highlight** from the Reader Options window.
- ❖ To add a **Note** or access the **Dictionary**, touch & hold on a word to display the Reader Options window, and then select **Dictionary** or **Add Note**.
- ❖ While viewing media, you can turn the device 90 degrees to the right to rotate the orientation of the screen from vertical to horizontal.

❖ If unit goes into sleep mode (power saving feature), lightly press & release the power button quickly to turn sleep mode off.

## Reader Function Menu

In the Reader application, the **Reader Function Menu** can be displayed by tapping on the **top of the screen**.



### Library

To access My Library bookshelf while viewing a media page, display the Reader Function Menu, → tap **Library**.



### Table of Contents

Display the Table of Contents of the currently open media file, allowing you to quickly display a desired chapter/page.




1. While viewing a media page, display the Reader Function Menu, → tap **Contents**.
2. The Table of Contents is displayed; tap on a chapter/page to display it.





### Bookmarks

When desired, you can bookmark pages, add notes to pages, and highlight text on pages, and then later quickly return to those pages.

#### Bookmarks

1. To **bookmark** a page, tap  in the upper right corner of the page. The symbol changes to , indicating the page has been bookmarked.
2. To display the list of all bookmarks you have created in the media you are currently viewing, display the top function menu, → tap **Bookmarks**.
3. To **return to a bookmarked page**, tap  next to desired bookmark, → tap **View**.

4. To **delete** bookmarks, tap on  while displaying a bookmarked page, or while in the Bookmarks screen, tap  next to the desired bookmark, → tap **Delete Selected**.


## Notes

As you read your media, you can quickly and easily make notes on pages for later reference.


### Add Note

1. On a page, touch & hold on any word to open the Reader options window.
2. Tap **Add Notes**. The **Notes** dialog window opens.
3. Tap into the note entry area, enter the desired text, → tap **Add**.
4. The word related to the note is highlighted in blue.

### View Notes

1. To display a list of all notes you have added to a media file, display the top function menu, → tap **Bookmarks**.
2. Tap **Notes**.
3. Tap on the note you want to view.
4. To jump to the page associated with a note, tap  next to the note, → tap **View**.

### Delete Notes

1. Display the top function menu, → tap **Bookmarks**.
2. Tap **Notes**.
3. Tap  next to the notes you want to delete, → tap **Delete Selected**.

## Highlights


As you read your media, you may want to highlight points of interest for later reference.

### Add Highlights

1. On a page, touch, hold & slide your finger across the text that you want to highlight.
2. Tap **Highlight** in the Reader options window.
3. The selected text is highlighted in yellow.

### View Highlights


1. To display a list of all highlights you have added to a media file, display the top function menu, → tap **Bookmarks**.

2. Tap **Highlights**.
3. Tap on the highlight you want to view.
4. To jump to the page associated with a highlight, tap  next to the highlight, → tap **View**.

#### Hide all Highlights

1. To turn all highlights off in the currently open media file, display the top function menu, → tap **Bookmarks**.
2. Tap **Highlights**.
3. Tap **Highlights Off**.
4. To show highlights again, tap Highlights On.

#### Delete Highlights

1. Display the top function menu, → tap **Bookmarks**.
2. Tap **Highlights**.
3. Tap  next to the highlights you want to delete, → tap **Delete Selected**.



### Go To

Use the **Go To** function for quick access to the Table of Contents, a particular page, or string of text (*word or phrase*) within the document you are viewing.

#### Display Table of Contents

1. While viewing a media page, display the Reader Function Menu, → tap **Go To**.
2. Tap **Contents** to display the **Table of Contents**.
3. Tap on a chapter title to jump to it.

#### Jump to Page

1. While viewing a media page, display the Reader Function Menu, → tap **Go To**.
2. Tap **Page**.
3. Enter the page number you want to view, → tap **GO**.

#### Search for Specific Text

1. While viewing a media page, display the Reader Function Menu, → tap **Go To**.

2. Tap **Word**.
3. Enter the desired text, → tap **GO**.  
All instances of the found text are highlighted throughout the document.
4. You can scroll through the pages for all highlighted text, → tap **Cancel Find** to return to the original page you were viewing.  
OR  
You can touch any of the highlighted text to automatically cancel the find mode, and then that page becomes the current page.

### Last Read

After performing searches, you can quickly return to the last page you were reading.

- ❖ *A page must be displayed at least 15 seconds to be saved as “last read”.*
  - ❖ *Device only saves 50 last read items, therefore the 51<sup>st</sup> “last read” item is saved and the oldest saved item is eliminated (last in, first out).*
1. While viewing a media page, display the Reader Function Menu, → tap **Go To**.
  2. Tap **Last Read**.

### Font Size

For optimal viewing, you can adjust the size of the onscreen text by changing the **Font Size**.

1. While viewing a media page, display the Reader Function Menu, → tap **Font Size** to change the text size.
2. Tap the desired font size from the drop-down list.

### Night Read

You can switch the background to black with white text, allowing you to view media without emitting as much light as the normal view mode.

**Normal** view mode is white background with black text.

**Night Read** view mode is black background with white text.

1. While viewing a media page, display the Reader Function Menu, → tap **Night Read**.
2. Night Read view mode stays in effect until you switch back to normal view mode by tapping **Day Read**.





## Screen Orientation - Lock

For optimal viewing while reading, the orientation of the screen automatically rotates from vertical to horizontal depending on how you hold the device.






When desired, you can lock the screen in the desired orientation to prevent the auto-rotation (*in Reader only*).

To lock, while viewing a media page in the desired orientation, display the Reader Function Menu, → tap **Lock**.

To unlock, display the Reader Function Menu, → tap **Unlock**.

## Play Music in Background while Reading

You can play music in the background as you read media files.

1. Open the desired media file in the **Reader**.
2. Tap  in the upper left corner of the screen to display the music navigation bar.
3. Tap  to begin playing the music.
4. Use the controls to pause/play and play previous/next song. Use the volume buttons on the top of the device to adjust the volume.
5. Tap  to close the navigation bar and leave music playing.
6. Tap  to re-display the music navigation bar.
7. Tap  to stop the music and close the navigation bar.



---

 
## WEB

Use the Web feature to access the Internet and 'surf the web' and visit your favorite websites.

- ❖ *The Web feature requires a connection to a Wi-Fi network. If you have not set up your Wi-Fi network, do so now using the instructions on page 41.*
- ❖ *While viewing the browser, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*

 
## Go to a Website

1. Select **Web** from the Application Quick Launch Bar to launch the internet browser.

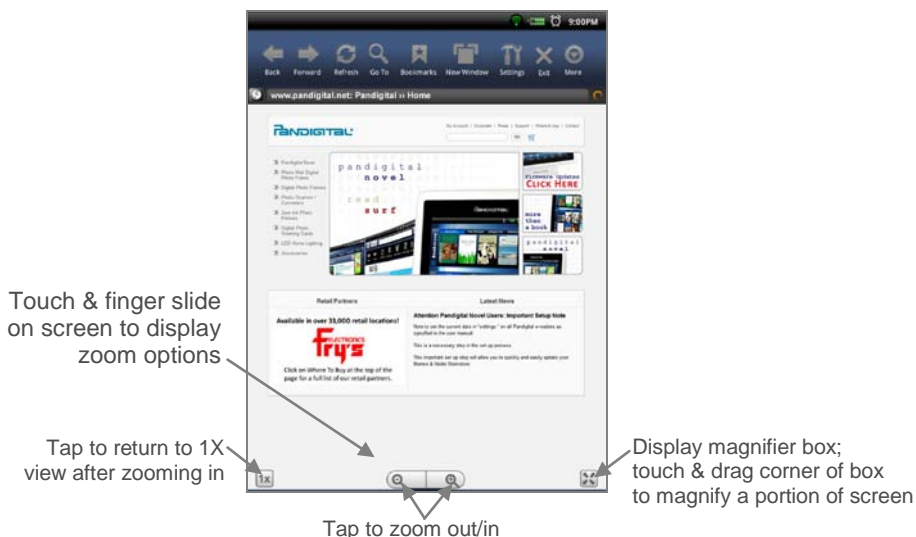








2. To go to a new website, tap **Go To**, → tap in the web address entry field at the top of the screen.
3. Enter the desired website address, → tap **Go**.

## Browser Function Menus









| Functions |  |
|-----------|--|
| Back      | Displays previously displayed web page, OR returns to previous application screen.                                 |
| Forward   | Returns to web page that was displayed before tapping <b>Back</b> to display the previous web page.                |
| Stop      | Stop loading the web page currently being loaded. <i>(This changes to Refresh when page is completely loaded.)</i> |

|   |   |
|---|---|
| <br>Refresh     | Refreshes the screen by re-loading the current web page.                                  |
| <br>Go to      | Enter a different website URL address.  |
| <br>Bookmarks  | Bookmark currently displayed web page, access list of all bookmarks, or delete bookmarks. |
| <br>New Window | Shows open browser windows.<br>You can have up to 8 browser windows open at a time.       |
| <br>Settings   | Set multiple browser settings as desired.   |
| <br>Exit       | Close the web browser and return to previous screens                                      |
| <br>More       | Display <b>Menu page 2</b> .  |

## Menu page 2

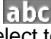

| Functions   |   |
|---|---|
| <br>Back         | Displays previously displayed web page, OR returns to previous application screen.        |
| <br>Find on page | Search for string of text on the current web page.  |
| <br>Select text  | Select text on the current web page and paste into web or other application entry fields. |
| <br>Share       | Send the URL address of the webpage you are viewing to others via email.                  |
| <br>Downloads  | Cancel or clear browser download history.   |
| <br>More       | Return to <b>Menu page 1</b> .  |



## Go To Website

Use **Go To** to enter and go to a different website URL address.

1. In an open browser window, tap **Go To**.
2. Tap into the URL address field to enter the desired website address.
3. Tap **Go**.



## Browser Bookmarks

You can bookmark web pages that you visit and want quick access to later.



### Bookmark a Web Page

1. In an open browser window, tap **Bookmarks**, → tap **Add Bookmark**.
2. If you want to rename the bookmark, tap in the **Name** field and enter the desired name.
3. Tap **OK**.

### Go to Bookmarked Web Page

1. On the browser window, tap **Bookmarks**.
2. In the Bookmarks window, tap on the desired web page.
3. The browser displays the selected web page.

### Delete Bookmarks

1. On the browser window, tap **Bookmarks**.
2. In the Bookmarks window, tap  next to the bookmarks you want to delete, → tap **Delete Selected**.
3. In confirmation, tap **OK** to delete.
4. Tap  to close the window and return to the web page.



## New Window

Up to the last 8 websites you have visited are cached and shown in the Windows screen allowing you to quickly return to them.


## Open New Window

1. In an open browser window, tap **New Window**.
2. The new window opens to your designated Home website.
3. Tap **Go to** and then enter the new website address, → tap **Go**.

## Switch Windows

1. In an open browser window, tap **New Window**.
2. If more than 4 windows are open, finger slide vertically to view all windows.
3. Tap on the window that you want to view.

## Close Windows

1. In an open browser window, tap **New Window**.
  2. Tap  on each window you want to close.
- ❖ *When you're in the Browser application, at least one window must be open, so if you close all windows, a new window automatically opens.*



## Browser Settings

You can set browser settings to enhance your Internet browsing.

In an open the browser window, tap **Settings**.

❖ *Finger slide vertically to view all browser setting options.*

## Page Content

Set the following options pertaining to viewing web pages:

- Text size (*display text as Tiny, Small, Normal, Large, Huge*)
- Text Encoding (*Latin, Unicode, Japanese*)
- Block pop-up windows (*prevents pop-up windows from automatically displaying when web pages include them*)
- Load images (*display images if included on web pages*)
- Auto-fit pages (*automatically fit the webpage to the screen*)
- Enable JavaScript (*allows JavaScripts to run if included on web page*)
- Open in background (*open new window when you select a link on a web page, rather than replace the current web page*)
- Set home page (*desired web page to be displayed when browser opens*)

## Privacy

Set the following options pertaining to your privacy level when viewing web pages:

- Clear cache (*delete all cached information from visited web pages*)
- Clear history (*clear the browser navigation history*)
- Accept cookies (*allow websites to save and read “cookie” data from the device whenever you visit their site*)
- Clear all cookie data (*clears all browser cookies that have been saved*)
- Remember form data (*remembers data you entered into forms for later use*)
- Clear form data

## Security

Set the following options pertaining to the security level when logging into secure web pages:

- Remember passwords (*saves your user names and passwords for all websites that require that information when establishing accounts with them*)
- Clear passwords (*clears all the saved usernames and passwords*)
- Show security warning (*alerts you of a problem with website’s security*)

## Advanced Settings





Set the following advanced options:

- Enable Gears (*set for applications that extend browser functionality*)
- Gears Settings (*settings for applications that extend browser functionality*)
- Reset to default (*clears all browser data and resets to default settings*)



## Find on Page


You can search for a string of text within the currently displayed web page.

1. In an open browser window, tap  to display Menu page 2, → tap **Find on page**.
2. Enter the desired string of text (*word, phrase, etc.*) in the entry field. All matching text is highlighted as you enter the text.
3. If you want to scroll through multiple matches, tap  or .
4. Tap  to close the entry box and resume normal viewing.



## Select Text

You can select the text of a webpage address on the web page you're viewing, and then you can paste the text into web or other application entry fields.


1. On the browser window, tap  to display Menu page 2, → tap **Select Text**.
2. Touch, hold & slide your finger across the text you want to copy. The text is copied to the clipboard.
3. Touch and hold in the desired entry field, → tap **Paste**.
4. Tap **Go** on keypad.



## Share

Use Share to send the URL address of the webpage you are viewing to others via email.


❖ *If you have not yet set up your email account, you are prompted to do so before using this feature.*

1. On the browser window, tap  to display Menu page 2, → tap **Share**.
2. Follow the prompts to enter the recipient's email address and your message.
3. Optional, add other email addresses as cc/bcc, or add attachment if desired.
4. Tap **Send**.



## Downloads

As you download files from websites, the download history is recorded in the device. You can cancel downloads or clear the history through this feature.

1. On the browser window, tap  to display Menu page 2, → tap **Downloads**.
2. Tap **Clear download list** if you want to clear all download history.
3. Tap **Cancel all downloads** if you want to stop all pending downloads from downloading.




## SETTINGS

### Settings>General


1. Select **Settings** from the Application Quick Launch Bar.
2. Tap in the **B&N Account** and **Password** fields to enter your **Barnes & Noble** account login information.
3. Tap in the **Time Zone** field to select the time zone for your location, and then tap **Set Date/Time**.

**It is important to have the correct time zone set in order to connect with your Barnes & Noble account.**

4. Select your desired time format:  
**12** = 12:00am-12:00pm (*default*)  
**24** = 12:00-24:00
5. Tap in the **Language** field to select desired language from the drop-down list. (*English only available; more languages will be available in future firmware updates.*)
6. Tap & slide  to adjust the screen brightness.  
When **Auto Brightness** is selected, the device senses the light exposure and automatically adjusts the screen's brightness accordingly (*i.e., in dark environments the screen automatically brightens*).
7. Tap the desired volume setting for the **Keyboard and System Sounds** (*i.e., keyboard click, end of row ding, warning ding, etc.*).

### Settings>Photos


Use these functions to set your Slideshow preferences.

1. Select **Settings** from the Application Quick Launch Bar, → tap **Photos**.
2. Tap in the **Slideshow Interval** field to select the speed at which the slideshow photos transition from one to another (*default = 5 seconds*), → tap **OK**.
3. Tap  next to the desired **Slideshow Transition** to set the special effects as slideshow photos transition from one to another (*default = Random*).
4. Tap **Enable Music with Slideshow** if you want music to automatically play as background music with your slideshows.
5. Tap **Display Current Date and Time** if you want to display the current time with your photos during your slideshows.



## Settings>Network

In order to connect to the Internet, you must have a Wi-Fi network set up on your pandigital **novel**. If you did not set up a network during the initial setup, do so now.

1. Select **Settings** from the Application Quick Launch Bar, → tap **Network**.
2. The device scans and lists local Wi-Fi Networks found. A  indicates secure networks that require login name/key to connect.
3. Tap the desired network to which you want to connect.
4. If the network is secure, enter the **Network Password** in the window.
5. Tap **Connect**.

❖ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Network** and then enter the network name and key, → tap **Save**.

❖ (Advanced): After saving the Wi-Fi network, you can change your network settings by selecting **Manual Setup**, and then follow the prompts.

## Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

1. Follow steps 1-6 above to select the hotspot Wi-Fi network.
2. Select **Web** from the Application Quick Launch Bar.
3. Enter the login information as required by the hotspot.

## Turn Wi-Fi Off

There may be times when you want to prevent the device from connecting to a Wi-Fi network, even if you've set the network up on the device.

Turn the Wi-Fi & Low Power button on the top of the unit off.




On

left

Off

center or right


❖ The  on the top of screens indicates the Wi-Fi is connected, otherwise no icon is displayed.

## Delete 'Remembered' Wi-Fi Network



When you connect to a Wi-Fi network, the device remembers the settings for future connections. If you have previously connected to networks that you no longer want 'remembered', you can delete them from the Network list.

1. Select **Settings** from the Application Quick Launch Bar, → tap **Network**.
2. Tap the network that you want to delete, → tap **Forget**.

## Settings>Alarm

❖ This clock icon  displayed at the top of screens indicates that one or more alarms have been set and are active.

### Add Alarm

1. Select **Settings** from the Application Quick Launch Bar.
2. Tap  in top option bar, → tap **Alarm**.
3. Tap **Add Alarm**.
4. Tap in the **Label** entry field to enter the desired descriptive title (*i.e.*, *Lunch with friends*).
5. Tap in the **Alarm** entry field to enter the time, → tap **Set**.
6. Tap **Alert** and select the desired alert sound.
7. If you want the alarm to repeat on specific days, tap  above the desired days.  
❖ If you don't select a repeat, the alarm is automatically deleted after it is activated.
8. Tap **Save**.

### Set Alarm Volume

In the Alarm screen, tap & slide  to adjust the volume level of the alert.

### Shut Off Alarm Alert



When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.


Tap **Dismiss** to cancel the alert.

### De-Activate Alarms

You may have instances where you want to temporarily de-activate alarms rather than delete them.

1. In the Alarm screen, tap  next to the alarm(s) you want to de-activate.
2. Tap  to re-activate.

## Edit Alarm

1. In the Alarm screen, tap **Edit**.
2. Tap the alarm you want to edit, → make desired edits.
3. Tap **Save**.
4. Tap  to return to the Alarm screen.


## Delete Alarm

1. In the Alarm screen, tap **Delete**.
2. Tap the alarm you want to delete, → tap **Delete**.

## Settings>Factory Reset




**WARNING!** All Barnes & Noble account information **will be deleted**.  
Adobe DRM Activation records will be deleted.  
All personalized data (email accounts, contacts, etc.) **will be deleted**.  
All eBooks, eMagazines and eNewspapers **will be deleted**. We recommend that you **back up** all media to your computer **before** resetting the defaults.  
**Note:** If you do not back up your Barnes & Noble media, you can simply re-download it after you reset the device.


1. Select **Settings** from the Application Quick Launch Bar.
2. Tap  in top option bar, → tap **Factory Reset**.
3. Tap **Reset device**.
4. Tap **YES** to confirm the reset, or tap **NO** to cancel reset.
5. The device automatically shuts down.
6. Turn the device back on and perform the following setup for Language, Wi-Fi Network and Email.

## Select Language


Tap **Save** with English selected. (*English only available at this time; more languages will be available in future firmware updates.*)

## Wi-Fi Network Setup

The device automatically scans and lists local Wi-Fi Networks found. A  indicates secure networks that require login name/key to connect

1. Tap the desired network to which you want to connect.
2. If secure network, enter the network **Password**.
3. Tap **Connect**.
4. When connected, tap  to continue.



- ❖ The  on the top of screens indicates the Wi-Fi is connected, otherwise no icon is displayed.
- ❖ If your Wi-Fi network broadcast is set as hidden, it won't be found by the auto scan. Tap **Add Network** and then enter the network name and password, → tap **Connect**.
- ❖ (Advanced) After saving the Wi-Fi network, you can change your network settings by selecting **Manual Setup**, and then follow the prompts.

## Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

1. Follow steps 1-4 above to select the hotspot Wi-Fi network.
2. Select **Web** from the Application Quick Launch Bar.
3. Enter the login information as required by the hotspot.

## Email Setup


❖ POP3, SMTP and IMAP accounts are supported.

1. Enter your **Email Address** and **Password**, → tap **Next**.  
This is your default account until you add other email addresses later, and then you can select a different address as the default account (pg.51).
2. If desired, enter an account name, → tap **Done**.
3. (optional) To select the account type, tap **Manual Setup** and then select the account type.



## Settings>Support

Select **Settings** from the Application Quick Launch Bar.

Tap  in top option bar, → tap **Support**.

The information listed on the Technical Support Information screen may be required if you contact Technical Support.



## MUSIC

These audio file formats are supported: MP3, WAV and AAC

Methods that can be used to add audio files to your Music List:

- Import audio files from an SD card
- Save audio files from email attachments
- Download audio files from online music websites

## Play Music

1. Select **Music** from the Application Quick Launch Bar.
2. Select the desired media source from which you want to play your audio files.

3. The Music List screen is displayed.
4. When **Shuffle** is off, selected audio files play in the order of selection, or if all are selected, audio files play in order listed in the Music List. To play audio files in random order, tap **Shuffle** to turn on (● = on).
5. When **Repeat** is off, selected audio files play once and then stop. To play audio files continuously, tap **Repeat** to turn on (● = on).
6. If you want the songs sorted by song title rather than artist, tap **Title**.
7. To play all songs listed, tap **Select All**, → tap **Play**.  
To play one song, tap on the song listing, → tap **Play**.  
To play selected songs, tap ☐ next to the desired song files, → tap **Play**.
8. When the Music Play screen is displayed:
  - Use the control panel to pause/play, and play previous/next audio file.
  - Use the volume buttons on the top of the device to adjust the volume.
  - Tap to re-display the music play option buttons.
  - Tap to return to previous screens; the music continues to play.

### Delete Audio Files

In the Music List screen, tap ☐ next to the desired audio files to delete, → tap **Delete Selected**.

## Playlist

If desired, you can build separate playlists of selected audio files from your Music List, allowing you to play a selected list at any time (*i.e., your favorites, specific genre, specific artist, etc.*).

### Add songs to Playlist



1. In the Music screen tap ☐ next to the song titles you want to add.
2. Tap **Add to Playlist**.
3. Tap **Create a New Playlist**.
4. Tap in the Playlist entry field → enter desired name for your playlist, → tap **Save**.
5. Repeat steps to add another playlist or add music to existing playlist.
6. Tap to close the Add to playlist window.

### Play songs in Playlist

1. In the Music screen, tap **Playlist**.

2. Tap the Playlist that you want to play.
3. The Music Play screen is displayed and the first song begins to play.


### Delete songs from Playlist

1. In the Music screen, tap **Playlist**.
2. Tap the Playlist which contains songs you want to delete.
3. The Music Play screen is displayed.
4. Tap  to return to the Playlist screen.
5. Tap  next to the desired song titles you want to delete.
6. Tap **Delete Selected**, → tap **OK** to confirm deletion.

❖ *Deleting audio files from the Playlist does not delete them from the main Music List.*

### Return to Music List

In the Playlist screen without music playing, tap **Artist** or **Title** to return to the Music screen.

In the Music Play screen with music playing, tap  to return to the Music screen.



## VIDEOS

The video file format supported: H.264 AVC and Mp4 SP

Methods that can be used to add videos to the internal memory:

 
- Import video files from an SD card
- Save video files from email attachments
- Download videos from online video websites

### Play Video

1. Select **Videos** from the Application Quick Launch Bar.
  2. Select the desired media source from which you want to play your video files.
  3. The Video Gallery screen is displayed.
  4. Tap on a video, → tap **Play**.
- ❖ *While viewing your video, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*

## Video Navigation Bar

While your video is playing, tap anywhere **on the video** to display the navigation bar at the bottom of the screen.

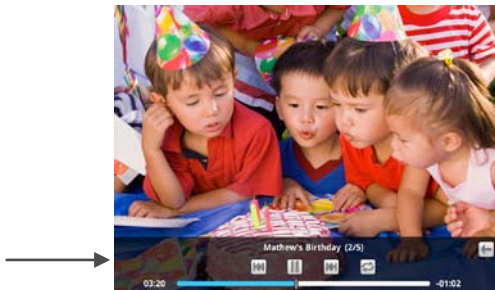

Use the controls to pause , play , play previous or next video  , and repeat play .

Use the volume button on the top of the device to adjust the volume.

To return to the Video Gallery screen, tap .

## Delete from Video Library

In the Video Gallery screen:

1. To delete all videos, tap **Select All**, and then **Delete Selected**.
2. To delete selected videos, tap **Multi-Select**, → tap on the desired video files you want to delete, → tap **Delete Selected**.



## PHOTOS

These photo file formats are supported: JPEG, BMP, PNG, and non-animated GIF

The following methods can be used to add photos to the internal memory:

- Import photos from an SD card (pg. 57)
- Save photos files from email attachments
- Download photos from your favorite online photo sharing websites


## Photo Gallery

- ❖ *While viewing your photos, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*











❖ Scroll through multiple pages of photos in the Photo Gallery by finger sliding **vertically** from top or bottom of screen.

1. Select **Photos** from the Application Quick Launch Bar.
2. Select the desired media source from which you want to view your photos.
3. The Photo Gallery screen is displayed.
4. To view a single photo, tap on the desired photo, → tap **View**.  
To view multiple photos, tap **Multi-Select**, → tap on each photo you want to view, → tap **View**.

When a photo is displayed in full-screen mode, the Photo Function Menu appears at the top of the screen and the  appears at the bottom of the screen for 4 seconds. After they disappear, tap anywhere on the screen to re-display them.

If you leave the photo displayed on the screen for approximately 20 seconds, the slideshow automatically begins to play.

### Photo Function Menu Options


|  |  |
|--|--|
| <br>Back        | Return to Photo Gallery  |
| <br>Zoom        | Enlarge the photo up to 5X   |
| <br>Rotate      | Rotate photo 90 degrees clockwise; tap multiple times until desired orientation is achieved. Rotated version is saved.       |
| <br>Dim         | Switch the screen brightness from normal brightness to very dim  |
| <br>Previous    | Display previous photo selected or listed in Photo Gallery   |
| <br>Next       | Display next photo selected or listed in Photo Gallery   |
| <br>Wallpaper | <i>(appears only when viewing photos in internal memory)</i><br>Assign a photo as your wallpaper (background image) (pg. 50) |
| <br>Import    | <i>(appears only when photos are selected on SD Card)</i><br>Import photos from SD card into the internal memory (pg. 50)    |

## Play Slideshow

❖ You can set photo slideshow display functions through **Settings > Photos** (pg. 40).

To play a slideshow of all photos, in the Photo Gallery screen, tap **Select All**, → tap **Slideshow**.

To play a slideshow of selected photos, tap **Multi-Select**, → tap on each photo you want to include, → tap **Slideshow**.

When the slideshow is playing, tap anywhere on the screen to display the Photo Function Menu and the  for the Application Quick Launch Menu Bar.

## Play Music in Background


You can play music in the background as you play a slideshow.

1. Be sure your **Settings > Photos > Enable Music With Slideshow** is selected.
2. Start your slideshow as instructed above.
3. The music automatically plays in the background as your slideshow is displayed.



## Wallpaper

You can assign any photo from the **Internal Memory** as your display wallpaper.

1. Select **Photos** from the Application Quick Launch Bar.
2. If you have an SD card inserted, a Select Media Source window appears. Select the **Internal Memory**.
3. In the Photo Gallery screen, tap the desired photo, → tap **View**, → tap **Wallpaper**.
4. Tap  to return to the Photo Gallery screen.



## Import Photos

You can import photos from your SD card into the internal memory when desired.

1. Insert your SD card.
2. Select **Photos** from the Application Quick Launch Bar.
3. Tap **SD Card** in the Photos media source window.
4. To import an individual photo, tap on the photo that you want to import, → tap **Import Selected**, → tap **OK** to confirm import.

To import multiple photos, tap **Multi Select**, → tap desired photos to import, → tap **Import Selected**, → tap **OK** to confirm import.

## Delete Photos

You can only delete photos from the internal memory, not from SD cards.

1. Select **Photos** from the Application Quick Launch Bar.
2. Tap **Internal Memory** in the Select Media Source window.
3. To delete individual photo, tap on the photo that you want to import, → tap **Delete Selected**, → tap **OK** to confirm import.

To delete multiple photos, tap **Multi Select**, → tap desired photos to delete, → tap **Delete Selected**, → tap **OK** to confirm import.



---

## EMAIL

- ❖ *POP3, SMTP and IMAP accounts are supported.*
- ❖ *While viewing your email, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*

## Add Email Accounts

You can enter one or more personal email addresses that you would like to access through your **pandigital novel**.

1. Select **Email** from the Application Quick Launch Bar.
2. On the Email Accounts screen, tap **Accounts**.
3. On the Accounts screen, tap **Add account**.
4. Enter your **Email Address** and **Password**.
5. **Manual Setup (optional)**: The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc.*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
6. Tap **Save**.

- ❖ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

## Set up Yahoo! Plus Account

❖ *Yourpandigital novel does not support free Yahoo email accounts.*

Yahoo! Plus accounts must use the following data when setting up your email account.

### Incoming Mail Server Settings

- POP server: **plus.pop.mail.yahoo.com**
- Use **SSL**
- Port: **995**

### Outgoing Mail Server Settings

- SMTP server: **plus.smtp.mail.yahoo.com**
- Use **SSL**
- Port: **465**
- Use **Authentication**
- Account Name/Login Name: Your Yahoo! Mail ID (your email address without the “@yahoo.com”, for example “testing80”)
- Email Address: Your Yahoo! Mail address (for example, testing80@yahoo.com)
- Password: Your Yahoo! Mail password

## Set up Juno Platinum or Turbo Account

❖ *Yourpandigital novel does not support free Juno email accounts.*

Platinum or Turbo Juno accounts must use the following data when setting up your email account.

### Incoming Mail Server Settings

- POP server: **pop.juno.comnovel**

### Outgoing Mail Server Settings

- SMTP server: **authsmtp.juno.com**

## Edit Email Information

1. Select **Email** from the Application Quick Launch Bar.
2. On the Email Accounts screen, → tap the desired account.
3. Tap on **Account Settings**.
4. Make desired changes, → tap **Save**.

## Email Inbox

1. Select **Email** from the Application Quick Launch Bar.

2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.

### Open Email Message

1. In the **Inbox** screen, tap on an email to open it.
2. Tap **Reply** to select a Reply option:
  - Reply
  - Reply all

❖ *Attachment files must be of a supported format in order to be saved in your pandigital novel.*
3. To display the previous or next email message listed in the **Inbox**, tap **Previous** or **Next**.
4. If you want to delete the message, tap **Delete**.

### Compose New Email Message

1. In the **Inbox** screen, tap **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally tap **Add Cc/Bcc** if you want to send a copy via Cc or Bcc.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, tap **Add Attachment** to attach a file.
7. Tap **Send** when ready to send your email.
8. You can save your message without sending it by tapping **Save as Draft**.
9. If you do not want to send or save the message, tap **Discard**.

### Delete Email Accounts

❖ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*

1. Select **Email** from the Application Quick Launch Bar.
2. On the **Email Accounts** screen, **touch and hold** on the account you want to delete.
3. In the pop-up Account options window, tap **Remove account**.
4. Tap **OK** to confirm the deletion.

## Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Select **Email** from the Application Quick Launch Bar.
2. On the Email Accounts screen, tap the account you want as the default, → tap **Account Settings**.
3. Tap ☒ next to **Default Account**.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



## ALARM

 
You can use your **pandigital novel** as an alarm clock by setting multiple alarms.

Tap **Alarm** in the Application Quick Launch Bar for quick access to the **Settings>Alarm** setup functions (pg. 42).




## CALENDAR

Select **Calendar** from the Application Quick Launch Bar.

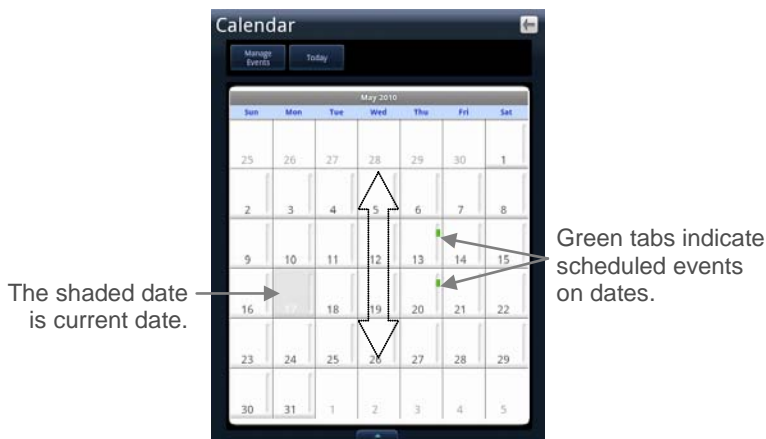


Finger slide vertically from top or bottom to display other months.

## Add Event

1. On the Calendar screen, tap on the date to which you want to add an event.
2. Tap **Add Event**.
3. Tap in each entry field to enter the desired event information, → tap **Save**.
4. Repeat steps 2-3 for additional events on the same date.
5. Tap  to return to the Calendar screen.

## Edit Event

1. On the Calendar screen, tap on the date with the event you want to edit.
2. Tap on the event you want to change.
3. Make desired changes, → tap **Save**.
4. Tap  to return to the Calendar screen.

## Event Reminder Alerts

### Single Reminder

If you assigned one event reminder, a pop-up alert appears before the event by the number of minutes you selected.

Tap **Snooze** if you want to be reminded again in 5 minutes, or tap **Dismiss** to cancel the alert.

### Multiple Reminders

If you assigned multiple event reminders, the first pop-up alert appears before the event by the number of minutes you selected for the first reminder.



Tap **Dismiss** to cancel the first alert.

Subsequent pop-up alerts appear before the event by the number of minutes you selected for each reminder.

Tap **Dismiss** to cancel the alert.

If you tap **Snooze**, multiple alerts appear every 5 minutes until you tap **Dismiss**.

## Delete Events

1. On the Calendar screen, tap **Manage Events**.
2. Tap  next to each event you want to delete → tap **Delete Selected**.
3. Tap  to return to the Calendar screen.



---

## CONTACTS

You can create an address book of your personal contacts, including personal notes as desired.

Select **Contacts** from the Application Quick Launch Bar.

### Add New Contacts

1. In the Contacts screen, tap **Add Contact**.
2. Tap in each entry field to enter your contact information.
3. Tap **Save**.

### Edit Contacts

1. In the Contacts screen, tap on the desired contact name that you want to edit.
2. Make desired changes, → tap **Save**.

### Email Contacts

❖ *You must have a default email account set up before using this feature. If you have not yet set up your account, do so now (pg. 51).*

1. In the Contacts screen, tap ☐ next to the contacts you want to email.
2. Tap in the **Subject** and **Compose Mail** fields to enter your message.
3. Optionally tap **Add Cc/Bcc** or **Add Attachment** as desired.
4. Tap **Send**.

### Delete Contacts

1. In the Contacts screen, tap ☐ next to the contacts you want to delete, → tap **Delete Selected**.
2. Tap **OK** to confirm the deletion.



---

## STOCKS

You can quickly check the status of specific company's stock offerings.

Select **Stocks** from the Application Quick Launch Bar. The browser launches and displays a popular Finance webpage.





---

## FACEBOOK

Select **Facebook** from the Application Quick Launch Bar. The browser launches and displays your Facebook login window; enter your login information to log into your Facebook account.



---

## WEATHER

Select **Weather** from the Application Quick Launch Bar. The browser launches and displays a popular Weather webpage.



---

## SEARCH

You can search for text within media file names or text within eBook titles in the Bookstore row on the HOME screen.

1. Select **Search** from the Application Quick Launch Bar.
2. Tap into the search entry field and enter the desired text.
3. Tap **Search Novel** to search for text within media file names, or tap **Search Bookstore** to search for text within an eBook title.
4. The search results are displayed according to your selected search.
5. Tap on a listed file to access it.
6. Tap **Clear** to enter new search text.




---

## IMPORT SD CARD

You can quickly and easily import all media files of selected media types from your SD card.

❖ *It is highly recommended that you use a SD card with at least 1GB capacity. If you do not have a large enough capacity SD card, you may want to copy files to the device from your computer via USB cable instead (pg. 58).*

❖ *Macintosh users must format SD cards using the FAT32 option in order for your pandigital novel to read the card.*

1. Insert your SD card.
2. Select **Import SD** from the Application Quick Launch Bar.
3. In the Import Media window, tap  next to the desired media type(s) you want to import.
4. Tap **Import**.

❖ *If you want to select specific photos to import, you can use the **Import Photos** function (pg. 50).*

❖ *If you import eBooks with separate cover images, the cover image file must be named the same as the eBook files, (for example, myebook.pdf, myebook.jpg) and it must not be larger than 10KB. File names should NOT include special characters; otherwise they are not recognized by the device.*


## Read Imported eBooks

Follow these steps to access and open eBooks that you have imported into the device.

1. Open **My Library** bookshelf.
2. Tap **Date, Title or Author**, → tap **Local** in the drop-down list to display the eBooks you've imported.
3. Tap on a book cover to open it in the Reader.

## Delete Local eBooks

Follow these steps to delete eBooks that you have imported into the device.

1. Open **My Library** bookshelf.
2. Tap **Manage Books**.
3. Tap **Date, Title or Author**, → tap **Local** in the drop-down list to display the books you've imported.
4. Tap  next to the eBooks you want to delete, → tap **Delete Selected**.
5. Tap **Yes** to confirm the deletion.

---

## Connect to Computer

You can connect your pandigital novel to a Windows or Macintosh computer via a USB cable to copy files between the two devices.

## PC System Requirements

Operating system: WINDOWS 2000/XP/VISTA/7

MAC OSX

USB Port Supported: USB 2.0 port

## Connect to Windows PC

1. Connect the small end of the USB cable to the **pandigital novel** mini USB port, and the larger end to an available USB port on your computer.
  2. Windows Explorer opens with the list all drives connected to your computer; the **pandigital novel** drive is listed as **PD\_Novel**.
  3. To copy files into your **pandigital novel**, select and drag the desired files into the appropriate pre-assigned folder based on file type.
    - **eBooks (EPUB, PDF)**  
Separate cover images files:
      - must be named the same as the eBook files, (for example, **myebook.pdf, myebook.jpg**)
      - must be copied into the **eBooks>.thumbnail** folder
      - must not be larger than 10KB
    - **Photos (JPG, JPEG, BMP, PNG, non-animated GIF)**
    - **Music (MP3, WAV, AAC)**
    - **Videos (MPEG4)**

❖ *File names should NOT include special characters; otherwise they are not recognized by the device.*
  4. To copy files from your **pandigital novel** into your computer, select and drag the desired files to any desired location on your computer.
- ❖ *See Read Copied eBooks to read books you copy into the eBooks folder (pg. 61).*

## Disconnect

It is important to always perform a safe PC 'release' before disconnecting the USB cable from the **pandigital novel** and computer.

❖ *After disconnecting the USB cable from your **pandigital novel**, the device shuts down and automatically restarts, which may take up to 20 seconds. Please wait and allow the Home screen to be displayed again.*

## Windows 7

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Eject Removable Disk** message corresponding with the **pandigital novel** device drive.

3. When the message “Safe to Remove Hardware” appears, you can disconnect the USB cable from your *pandigital novel* and computer.

#### Windows VISTA

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Safely remove USB mass Storage** device message corresponding with the *pandigital novel* device drive.
3. When the message “This device can now be safely removed from the computer” appears, you can disconnect the USB cable from your *pandigital novel* and computer.

#### Windows XP

1. On the Windows System Tray, click the hardware removal icon.
2. Click **Remove Hardware Safely**.
3. Select the storage device corresponding with the *pandigital novel*, and then click **Stop** to disconnect. A final dialog box opens.
4. Click **Close**.
5. When the message “***It is now Safe to Disconnect Hardware***” appears, you can disconnect the USB cable from your *pandigital novel* and computer.

### Connect to Macintosh Computer

❖ *eBooks downloaded from Barnes & Noble to a Macintosh computer are saved in an unsupported .pdb format. If you copy the .pdb formatted eBooks into your *pandigital novel*, they will not be recognized. You should always use **Get Books** to download eBooks directly from your Barnes & Noble download library into your *pandigital novel*. Music, Video and Photo files can be copied from a Macintosh computer into your *pandigital novel* as long as they are in a supported file format.*

1. Connect the small end of the USB cable to the *pandigital novel* mini USB port, and the larger end to an available USB port on your computer.
2. Macintosh recognizes the *pandigital novel* as an external storage device titled **PD\_Novel**.

3. To copy files into your **pandigital novel**, select and drag the desired files into the appropriate pre-assigned folder based on file type.
    - **eBooks** (EPUB, PDF)  
Separate cover images files:
      - must be named the same as the eBook files, (for example, **myebook.epub**, **myebook.jpg**)
      - must be copied into the **eBooks>.thumbnail** folder
      - must not be larger than 10KB
    - **Photos** (JPG, JPEG, BMP, PNG, non-animated GIF)
    - **Music** (MP3, WAV, AAC)
    - **Videos** (MPEG4)

❖ *File names should NOT include special characters; otherwise they are not recognized by the device.*
  4. To copy files from your **pandigital novel** into your computer, select and drag the desired files to any desired location on your computer.
- ❖ *See **Read Copied eBooks** to read books you copy into the eBooks folder (pg. 61).*

## Disconnect

- ❖ *After disconnecting the USB cable from your **pandigital novel**, the device shuts down and automatically restarts, which may take up to 20 seconds. Please wait and allow the Home screen to be displayed again.*
1. To safely disconnect from your Macintosh, select the **PD\_Novel** icon on your desktop and press **Command-e** to eject the disk.
  2. When the icon is no longer on the desktop, it is safe to unplug the USB cable.

## Read Copied eBooks

Refer to **Read Imported eBooks** on page 58.

---

## Adobe® eBooks

**Adobe® eBooks** is designed for reading and managing eBooks and other digital content transferred from Adobe Digital Editions (ADE).

To view Adobe® eBooks, you need a free Adobe account and Adobe Digital Editions software. Register your account and then download the software on the Adobe website: <http://www.adobe.com/products/digitaleditions>

## Authorize your pandigital novel for ADE


After you authorize your pandigital novel, it appears as a device in ADE (titled **PD\_NOVEL**). You can then copy eBooks from your ADE collection to your pandigital novel and vice versa.

1. Start ADE on your computer.
2. Connect your pandigital novel to your computer using the USB cable.
3. ADE detects your pandigital novel and displays the **Device Setup Assistant**.
4. Click **Authorize Device**, → click **Finished**.

## Transfer eBooks from ADE into your pandigital novel

1. With your pandigital novel still connected to the computer, drag and drop the eBooks from the ADE collection into your pandigital novel device (titled **PD\_NOVEL**).
2. Disconnect the USB cable.

## Read Adobe eBooks

1. Select **My Library** from the Application Quick Launch Bar.
2. Tap on **Date**, **Title** or **Author** and then select **Adobe Books** from the drop-down list.
3. The eBooks you transferred to PD\_NOVEL are listed.
4. Tap  next to desired eBook, → tap **View**.


❖ *If you attempt to open a book but an error message states the book cannot be opened, it may be an expired book or the activation record has been erased. Re-start your pandigital novel and then re-connect to the computer to re-activate the authorization.*

If an Adobe eBook has an expiration date, it also expires in your pandigital novel. If an eBook is returned in ADE before it expires, the next time you connect your device to your computer, ADE updates the status of the returned eBook on your device and you will not be able to read it.

## Delete Adobe eBooks

Two methods can be used for deleting Adobe eBooks from the device.

- A. Use the **Manage Books** feature in My Library.
  1. Open **My Library** bookshelf.
  2. Tap **Manage Books**.
  3. Tap **Date**, **Title** or **Author**, → tap **Adobe Books** from the drop-down list.

4. Tap  next to the eBooks you want to delete, → tap **Delete Selected**.
  5. Tap **Yes** to confirm the deletion.
- B. Connect the device to your computer, and then use standard file deletion methods using Windows Explorer or MAC Finder windows.



---

## USER GUIDE

To view the full `pandigital novel` User Guide, select **User Guide** from the Application Quick Launch Bar. The User Guide opens in the Reader.



Once open, you can use the standard **Reader** functions to search and navigate through the document in the same manner as your downloaded media files.

If you want to print the User Guide, copy it to your computer using the **Connect to Computer** instructions in the User Guide.

The User Guide is also posted on our website: [www.pandigital.net/support](http://www.pandigital.net/support). Click the **Downloads** tab on the **Support** page.

---

## UPDATE FIRMWARE

**WARNING!** Performing a firmware update resets all settings to factory defaults, and all your personalized data (email accounts, contacts, etc.) **will be deleted**.

Your Barnes & Noble eBooks, eMagazines and eNewspapers **will be deleted**, but you can simply re-download the media to My Library after the update is complete.

The local media that you imported from SD card or copied from computer will remain in the device.

❖ *If the device has a low battery charge, you may not be able to perform a successful update. It is recommended that you connect the device to the power adapter before performing the firmware upgrade.*

❖ *This option is for Windows PC only at this time.*

1. Back up all your media files to your computer
  2. On your computer, go to [www.pandigital.net/downloads](http://www.pandigital.net/downloads).
  3. Choose the **Update with Your PC** option.
  4. When asked to Save or Run, select **Run**.
  5. Follow the prompts in the Upgrader window to download the firmware into your device.
  6. After the download is complete, turn your device off.
  7. Press the **Volume +** key and then the **power key** and hold both approximately 10 seconds until you see the upgrade text appear on the screen, and then release both buttons immediately.
  8. Your device is updated and restarts automatically.
  9. The Language, Wi-Fi Network and Email must be setup again. Refer to page 43 for instructions.
- 

## Frequently Asked Questions

### ADOBE® eBooks

**Q: Are digital books other than Barnes & Noble compatible with the pandigital novel?**

**A:** Yes, as long as the eBook is in .epub or .pdf format. Refer to Adobe® eBooks section to use Adobe Digital Editions software to transfer to your device (pg. 61).

**Q: Does the pandigital novel support Adobe® eBooks which have Digital Rights Management (DRM) on them?**

**A:** Yes, as long as the eBook is in .epub or .pdf format.

**Q: Does the pandigital novel support eBooks borrowed from a public library using a global distributor such as Overdrive.com?**

**A:** Yes. Download the books to your computer and then use Adobe Digital Editions software to transfer them to your **pandigital novel**.

### BASIC FUNCTIONALITY

**Q: Do I have to charge the battery before use?**

**A:** Yes. Charge the battery for at least 4 hours using the power adapter. This device does not charge via the USB cable.



**Q: My unit seems to be frozen and is un-responsive. What do I do?**

**A:** Reset the device by pressing and holding the power button for 10 seconds.

**Q: I have attempted to perform a firmware update but it consistently fails.**

**A:** If the device has a low battery charge, you may not be able to perform a successful update. Connect the device to the power adapter and then try again.

**Q: How do I contact Customer Support?**

**A:** If this FAQ section doesn't answer your questions, you can contact Customer Support at 1-800-715-5354.

## MY LIBRARY

**Q: How do I add media to My Library?**

**A:** You can download media from Barnes & Noble, import media from your SD card, or copy media files from your computer.

**Q: Why can't I find books I've imported from an SD card or copied from my computer?**

**A:** Imported and copied books can be accessed in My Library screen by tapping on **Date**, **Title** or **Author** and then select **Local** in the drop-down list.

**Q: Can I create personal bookshelves for organizing my media?**

**A:** Yes. On the My Library screen, tap **Bookshelves** (pg. 26).

**Q: Do I need an account with Barnes & Noble to download from their site?**

**A:** Yes. You do need an account to download sample books or purchased media from their site into the device.

**Q: When it's not visible, how do I display the Application Quick Launch Bar?**

**A:** Simply tap on the  at the bottom of the screen.

## READER

**Q: Can I view media files in either vertical or horizontal orientation?**

**A:** Yes, digital media (*eBooks*, *eMagazines*, *eNewspapers*) or photos. To automatically switch viewing orientation, simply turn the device while viewing these types of media.



**Q: Can I change the size of the displayed text?**

**A:** Yes. Tap on the top of the screen to display the Reader Function Menu, → tap **Font Size** and then select the desired size from the drop-down list.

**Q: Can I easily jump to a specific page?**

**A:** Yes. Use either **Bookmarks** (pg. 29) or the **Go To** function (pg. 31).


**Q: Can I play music and read at the same time?**

**A:** Yes. You can tap the  icon in the upper left corner to display the music navigation bar, and then tap .


**Q: How do I display the Reader Function Menu while reading?**

**A:** Simply tap on the **top of the screen**.

**Q: How do I display the Application Quick Launch Bar while reading?**

**A:** Simply tap on the **top of the screen** and then tap  at the bottom of the screen.

**Q: How do I bookmark a page?**

**A:** Tap the  in the upper right corner of the page (pg. 29).

**Q: Can I highlight text on a page?**

**A:** Yes. On a page, touch, hold & slide your finger across the text that you want to highlight. Tap **Highlight** in the Reader options window that appears (pg. 30).

**Q: Can I add a note to a page?**

**A:** Yes. On a page, touch & hold on a word that is related to the note. Use the Reader options window that appears (pg. 30).

**Q: Does the Reader have a built-in Dictionary?**

**A:** Yes. On a page, touch & hold on the word you want to look up. Tap Dictionary in the Reader options window that appears (pg. 29).

**Q: Can I read books stored on my SD card?**

**A:** No, you must import the book into your **pandigital novel** first.

**Q: Why doesn't my pandigital novel read my SD card?**

**A:** If you create a SD card using a Macintosh computer, you must use the FAT32 option when formatting the SD card, otherwise the device will not read the card.

## WEB

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

**A:** No. The Wi-Fi adapter is built-in to your **pandigital novel**.

**Q: Can I have multiple browser windows open at the same time?**

**A:** Yes, up to 8 windows (pg. 36).

**Q: Can I change browser settings?**

**A:** Yes. There are multiple settings you can set as desired, including privacy & security options (pg. 37).

**Q: Can I search a web page for specific text?**

**A:** Yes. Use the **Find on Page** function (pg. 38).

**Q: Can I bookmark web pages?**

**A:** Yes. Use the browser **Bookmarks** function (pg.36).

## MUSIC

**Q: What type of audio files can I play on my pandigital novel?**

**A:** MP3, WAV and AAC

**Q: How do I add audio files to my pandigital novel?**

**A:** You can download audio files from your favorite online music/video store, import audio files from your SD card (pg. 57), or copy audio files from your computer (pg. 58).

**Q: Can I create a separate list of my favorite songs?**

**A:** Yes. Use the **Playlist** feature (pg. 46).

## VIDEO

**Q: What type of video files can I play on my pandigital novel?**

**A:** MPEG4

**Q: Can I stream videos on my pandigital novel?**

**A:** No. Only MPEG4 formats are compatible.

**Q: Can I play YouTube videos on my pandigital novel?**

**A:** No, the file format is not supported.

**Q: How do I add video files to my pandigital novel?**

**A:** You can download video files from your favorite online music/video store, import video files from your SD card (pg. 57), or copy video files from your computer (pg. 58).

## PHOTOS

**Q: What type of photo files can I view on my pandigital novel?**

**A:** JPG, JPEG, BMP, PNG, non-animated GIF

**Q: How do I add photo files to my pandigital novel?**

**A:** You can download photo files from your favorite online photo sharing websites, import photo files from your SD card (pg. 57), or copy photo files from your computer (pg. 58).

**Q: Can I view individual photos as well as slideshows?**

**A:** Yes. On the Photo Gallery screen you can select individual photos to view or tap **Slideshow** to play a slideshow (pg. 48).

**Q: Can I set preferences for how my slideshow displays?**

**A:** Yes. Slideshow options are available through **Settings> Photos** (pg. 40).

**Q: Why are the book cover images that I imported from SD card appearing in my Photo Gallery?**

**A:** If you select Books and Photos to be imported from the same SD card, the device adds the images to both the photo gallery and eBooks> .thumbnails folders. To prevent this, it is recommended that your SD card contains only books with covers and you use a separate SD for all other media types.

## EMAIL

**Q: Can I use any of my personal email addresses to send/receive email?**

**A:** Your pandigital novel supports POP3, SMTP and IMAP accounts.

## eBooks, Magazines, Newspapers

**Q: What types of printed emedia files are compatible with my pandigital novel?**

**A:** PDF and EPUB

**Q: How does the Lend/Return Books feature work?**

**A:** You can lend “lendable” books to your friends and family that have been purchased from Barnes & Noble. Barnes & Noble determines which books are “lendable”. Use **Lend/Return Books** function (pg. 24).

**Q: Can I receive books from my friends & family?**

**A:** Yes. Refer to the **Lend/Return Books** function to return books that have been lent to you (pg. 24).

**Q: Can I purchase a sample or returned borrowed book?**

**A:** Yes. Simply touch and hold on the book cover, and then select “Purchase the ebook” in the pop-up window and follow the prompts to complete the purchase.

**Q: Can I loan or borrow books from other brands of eReaders, such as a Nook?**

**A:** Yes.

**Q: Does the pandigital novel support eBooks borrowed from a public library using a global distributor such as Overdrive.com?**

**A:** Yes. Download the books to your computer and then use Adobe Digital Editions software to transfer them to your pandigital novel (pg. 61).

**Q: How long can I lend or keep a borrowed book?**

**A:** Two (2) weeks.

**Q: Can I download media from my Barnes & Noble account directly onto a SD card?**

**A:** No. All media is downloaded directly into the internal memory.

## COMPUTER COMPATIBILITY

**Q: Which media cards are compatible with my pandigital novel?**

**A:** SD/MMC Cards.

**Q: Which Operating Systems are compatible with my pandigital novel?**

**A:** Microsoft Windows XP, VISTA, 7, MAC OS.

**Q: How do I connect my pandigital novel with my computer?**

**A:** Use the USB cable included with the device, or any standard USB cable. Refer to the **Connect to Computer** function (pg. 58).

---

## Battery Management

The **pandigital novel** battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use the device at least once a week.
- Charge the battery regularly and fully. Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### Charge Battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (*approx. 4 hours*).

❖ *The battery does not charge via the USB cable.*

While charging, the battery icon displays as: .

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

---

## Important Safety Precautions

Always follow these basic safety precautions when using your **pandigital novel**. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep your **pandigital novel** out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the **pandigital novel**. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### Cleaning the device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

## Technical Specifications

|                          |  |                                       |
|--------------------------|--|---------------------------------------|
| Product Specs            | <b>7" Digital TFT LCD Display</b> 600x800 pixels   |                                       |
| Compatible Media Sources | Secure Digital™ (SD), MMC  |                                       |
| Features                 | Display digital printed media ( <i>eBooks, eMagazines, eNewspapers</i> )<br>Play digital Audio files<br>Play digital Video files<br>Display digital Photo files<br>Alarm Clock and Calendar<br>Connect to Wi-Fi networks<br>Web – check your social networks, stocks or the weather<br>Send/Receive Email<br>Display and import directly from SD Card<br>Automatic rotation of screen orientation<br>Includes stylus for faster screen navigation<br>Earphone jack included<br>Tabletop stand included for convenient hands-free viewing |                                       |
| Compatible File Formats  | eBooks   | EPUB, PDF                             |
|                          | Photo  | JPG, JPEG, BMP, PNG, non-animated GIF |
|                          | Audio  | MP3, WAV, AAC                         |
|                          | Video  | H.264 AVC and Mp4 SP                  |
| USB Ports                | Mini USB 2.0   |                                       |
| Internal Memory          | 2GB  |                                       |
| Wi-Fi Compatible         | Yes, built-in Wi-Fi adapter  |                                       |
| Audio output             | Built-in stereo speakers<br>Stereo-mini earphone jack  |                                       |
| Power Adapter            | 5V, 2A   |                                       |
| Battery                  | Rechargeable 2800mAh, 3.7V   |                                       |

---

## Limited Warranty

The limited warranty set forth below is given by Pandigital with respect to the Pandigital Novel™ line of products (the “Device”) purchased and used in the United States of America. Pandigital warrants this product as follows:

**LABOR:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will repair or replace the Device, at its sole option, at no charge. After this one (1) year period, labor charges will be charged on a case by case basis. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer.

**PARTS:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance will void user’s authority to operate the equipment. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer

This Limited Warranty does not cover damage or malfunctions caused by accident, disaster, misuse, abuse, negligence or other external causes; third-party products; Internet or telecommunications failures; commercial use; unauthorized opening, use, service, tampering, alteration, repair or modification; or inadequate packing or shipping procedures. This Limited Warranty also does not cover cosmetic damage or normal wear and tear. This Limited Warranty does not apply to Devices sold as used, refurbished or reconditioned. This Limited Warranty will be void if the Serial Number on your Device has been removed, tampered with or defaced or if your Device has been opened or serviced without authorization, tampered with, altered or modified. This Limited Warranty applies to your Device only (i.e., the hardware), and not to the software within your device. Similarly, this Limited Warranty does not cover downloaded data or materials, or accessories and peripherals, except as expressly provided above. This warranty is valid only in the United States.

The Device must be accompanied by a copy of the original retail purchase receipt for the warranty to be valid. If no proof of purchase is attached, the warranty will not be honored and repair costs incurred will be the responsibility of the end user. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty is invalid if the factory applied serial number has been altered and or removed from the product. This warranty does not provide protection for the loss of data, regardless of format. Pandigital reserves the right to modify and change the design of this Device without prior notice, written or otherwise.

**Limitations.** TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE.

SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF

WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

All content included on the Pandigital website as well as Pandigital Devices, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and software, are the property of Pandigital or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from Pandigital and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

To obtain warranty service, refer to Customer Support section at [www.pandigital.net](http://www.pandigital.net).

Technical support telephone number: 1-800-715-5354.

## FCC Notices

### FCC ID: POTPRD07T

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Federal Communications Commission (FCC) Statement Information to the User

**WARNING:** Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not



be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

---

## Disclaimers

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2005 Cisco Systems, Inc. All rights reserved.

Barnes & Noble and the "BN" logo are registered trademarks of Barnesandnoble.com LLC. All rights reserved.

Facebook and the "f" logo are registered trademarks of Facebook Inc. All rights reserved.

Yahoo!® is a registered trademark of Yahoo!

Contains Reader® Mobile technology by Adobe Systems Incorporated.

---

## License Agreement and Terms of Use

By activating and using the **pandigital novel**, you hereby consent and agree to our License Agreement and Terms of Use.

### The Device and Related Services

The Pandigital Novel (the "Device") is a portable electronic reading device that utilizes wireless connectivity to enable users to shop for, download, browse, and read books, newspapers, magazines, blogs, access websites, e-mail and other materials, all subject to the terms and conditions of this Agreement. The "Service" means the wireless connectivity, provision of digital content, software and support, and other services and support that Pandigital provides Device users.

### Wireless Connectivity

Coverage and Service Interruptions: You acknowledge that if your Device is located in any area without applicable wireless connectivity, you may not be able to use some or all elements of the wireless services. We are not responsible for the unavailability of wireless service or any interruptions of wireless connectivity.

### Digital Content

The Barnes & Noble Store: The Barnes & Noble Store enables you to download, display and use on your Device a variety of digitized electronic content, such as books, subscriptions to magazines, newspapers, journals and other periodicals, blogs, RSS feeds, and other digital content, as determined by Barnes & Noble from time to time (individually and collectively, "Digital Content").

Use of Digital Content: Upon your payment of the applicable fees set by Barnes & Noble, Barnes & Noble grants you the non-exclusive right to keep a permanent copy of the applicable Digital Content and to view, use, and display such Digital Content an unlimited number of times, solely on the Device or as authorized by Barnes & Noble as part of the Service and solely for your personal, non-commercial use. Digital Content will be deemed licensed to you by Barnes & Noble under this Agreement unless otherwise expressly provided by Barnes & Noble.

Restrictions: Unless specifically indicated otherwise, you may not sell, rent, lease, distribute, broadcast, sublicense or otherwise assign any rights to the Digital Content or any portion of it to any third party, and you may not remove any proprietary notices or labels on the Digital Content. In addition, you may

not, and you will not encourage, assist or authorize any other person to, bypass, modify, defeat or circumvent security features that protect the Digital Content.

## Software

**Definitions:** The following terms apply to the Device and to (a) all software (and the media on which such software is distributed) of Pandigital or third parties that is pre-installed on the Device at time of purchase or that Pandigital provides as updates/upgrades to the pre-installed software (collectively, the "Device Software"), unless you agree to other terms as part of an update/upgrade process; and (b) any printed, on-line or other electronic documentation for such software (the "Documentation"). As used in this Agreement, "Software" means, collectively, the Device Software and Documentation.

**Use of the Device Software:** You may use the Device Software only on the Device. You may not separate any individual component of the Device Software for use on another device or computer, may not transfer it for use on another device or use it, or any portion of it, over a network and may not sell, rent, lease, lend, distribute or sublicense or otherwise assign any rights to the Software in whole or in part.

**No Reverse Engineering, Decompilation, Disassembly or Circumvention:** You may not, and you will not encourage, assist or authorize any other person to, modify, reverse engineer, decompile or disassemble the Device or the Software, whether in whole or in part, create any derivative works from or of the Software, or bypass, modify, defeat or tamper with or circumvent any of the functions or protections of the Device or Software or any mechanisms operatively linked to the Software, including, but not limited to, augmenting or substituting any digital rights management functionality of the Device or Software.

**Automatic Updates:** In order to keep your Software up-to-date, Pandigital may automatically provide your Device with updates/upgrades to the Software.

**Export Regulations:** You agree to comply with all export and re-export restrictions and regulations of the Department of Commerce and other United States agencies and authorities, and not to transfer, or encourage, assist or authorize the transfer of the Software to a prohibited country or otherwise in violation of any such restrictions or regulations.

## General

**No Illegal Use and Reservation of Rights:** You may not use the Device, the Service or the Digital Content for any illegal purpose. You acknowledge that the sale of the Device to you does not transfer to you title to or ownership of any intellectual property rights of Pandigital or its suppliers. All of the Software is licensed, not sold, and such license is non-exclusive.

**Information Received:** The Device Software will provide Pandigital with data about your Device and its interaction with the Service (such as available memory, up-time, log files and signal strength) and information related to the content on your Device and your use of it (such as automatic bookmarking of the last page read and content deletions from the Device). Information we receive is subject to the Pandigital Privacy Notice.

**Patents:** The Device and/or methods used in association with the Device may be covered by one or more patents or pending patent applications.

**Termination:** Your rights under this Agreement will automatically terminate without notice from Pandigital if you fail to comply with any term of this Agreement. Pandigital's failure to insist upon or enforce your strict compliance with this Agreement will not constitute a waiver of any of its rights.

**Disclaimer of Warranties:** YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE IS AT YOUR SOLE RISK. EXCEPT FOR THE ONE-YEAR LIMITED WARRANTY, THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE ARE PROVIDED "AS IS" WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND AND PANDIGITAL AND ITS SUPPLIERS AND LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED

WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY PANDIGITAL OR AN AUTHORIZED REPRESENTATIVE OF PANDIGITAL SHALL CREATE A WARRANTY. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTIES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE DISCLAIMERS, EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Limitation of Liability: TO THE EXTENT NOT PROHIBITED BY LAW, NEITHER PANDIGITAL NOR ITS SUPPLIERS OR LICENSORS SHALL BE LIABLE TO YOU FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THE SERVICE, DEVICE, DIGITAL CONTENT OR SOFTWARE, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES ARISING OUT OF LOSS OF PROFITS, REVENUE, DATA OR USE OF THE DEVICE OR SOFTWARE OR ANY ASSOCIATED PRODUCT, EVEN IF PANDIGITAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, PANDIGITAL'S AGGREGATE LIABILITY UNDER THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID FOR THE DEVICE. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Disputes: ANY DISPUTE ARISING OUT OF OR RELATING IN ANYWAY TO THIS AGREEMENT SHALL BE SUBMITTED TO CONFIDENTIAL ARBITRATION IN ALAMEDA COUNTY, EXCEPT THAT, TO THE EXTENT YOU HAVE IN ANY MANNER VIOLATED OR THREATENED TO VIOLATE PANDIGITAL'S INTELLECTUAL PROPERTY RIGHTS, PANDIGITAL MAY SEEK INJUNCTIVE OR OTHER APPROPRIATE RELIEF IN ANY STATE OR FEDERAL COURT IN THE COUNTY OF ALAMEDA, AND YOU CONSENT TO EXCLUSIVE JURISDICTION AND VENUE IN SUCH COURTS. The arbitrator's award shall be binding and may be entered as a judgment in any court of competent jurisdiction. To the fullest extent permitted by applicable law, no arbitration under this Agreement shall be joined to an arbitration involving any other party subject to this Agreement, whether through class arbitration proceedings or otherwise.

Severability: If any term or condition of this Agreement shall be deemed invalid, void, or for any reason unenforceable, that part shall be deemed severable and shall not affect the validity and enforceability of any remaining term or condition.

Amendment: Pandigital reserves the right to amend any of the terms of this Agreement at its sole discretion by posting the revised terms on the Pandigital.net website. Your continued use of the Device and Software after the effective date of any such amendment shall be deemed your agreement to be bound by such amendment.

Contact Information: For communications concerning this Agreement, you may contact Pandigital by writing to Pandigital, Attn: Legal Department, 6375 Clark Avenue, Suite 100, Dublin, CA 95468.

© 2010 Pandigital, Inc. or its affiliates. All rights reserved. Pandigital, the Pandigital logo, Pandigital Novel, are trademarks of Pandigital Inc. Barnes & Noble and the "BN" logo are registered trademarks of Barnesandnoble.com LLC. All rights reserved. Facebook and the "f" logo are registered trademarks of Facebook Inc. All rights reserved. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Pandigital Novel contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

## CE Notice

Pandigital hereby declares that the essential requirements set out in the R&TTE Directive 99/5/EC have been fully fulfilled on our product with indication below:

Product Name: Pandigital Novel Mule-Rader

Model Name: PRD07T20WBL1

Brand Name: Pandigital

The following standards have been applied for the investigation of compliance:

EN 300 328 V1.7.1:2006

EN 301489-1 V1.8.1 2008-04

EN 301489-17 V2.1.1 2009-05

EN 62311:2008

EN 60950: 2006+A11: 2009

EN55022:2006+A1:2007/ EN 55024:1998+A1:2001+A2:2003



## Battery Statement

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## Radiation Exposure Statement

$E=6.62782$  V/m is the maximum E-Field strength when safety distance between the EUT and human body is maintained at least 20cm, which is below 61V/m as required in Annex III table 2 of EC Council Recommendation (1999/519/EC). This proves that the unit complies with the EN 62311 for RF exposure requirement.

## IC Notice

Product Name: Pandigital Novel Mule-Rader

Model Name: PRD07T20WBL1FR

IC: 4773A-PRD07T

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

“Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.